

Service
Service
Service

MX980D/37



Service Manual



TABLE OF CONTENTS

	Page
Location Boards / System info	1-2
Technical Specification	1-3
Service Tool / Measurement setup / Safety	1-4
Warning / Handling Chip components	1-5
Abbreviations	1-6
Instruction for Use	2
Dismantling hints / Service positions	3-1
Dismantling hints MDM Module	3-2
Wiring diagram	3-3
Block diagram	4
Service Test program	5
Front Board	6
Tuner 95 diagram	7A
ECO 5 Tuner diagram	7B
Multi-Channel Decoding Module	8
Mains Board	9
Mono Board	10
Exploded view	11
S-VHS Board	12
Exploded view partslist	13
Partslist Mono Board	14

Safety regulations require that the set be restored to its original condition and that parts which are identical with those specified be used.

Copyright 1995 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by MD 0016 Service Audio Printed in the Netherlands Subject to modification

3104 215 50060


PCS 102 481




PHILIPS

DISMANTLING HINTS

Dismantling of Front

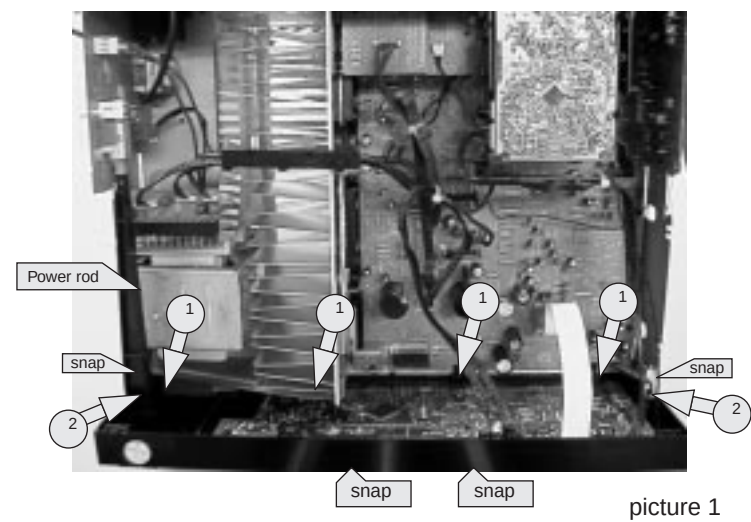


- 1) Remove top cover
- 2) Remove power rod
- 3) Remove 6 x screw as shown in picture 1
- 4) Release two snaps (left & right side front)
- 5) Release two snaps on the bottom side front
- 6) Tipp down front as shown in picture 2

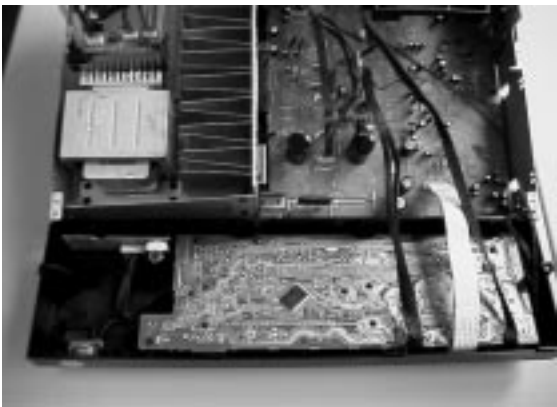

picture 2


Dismantling of mainstrafo

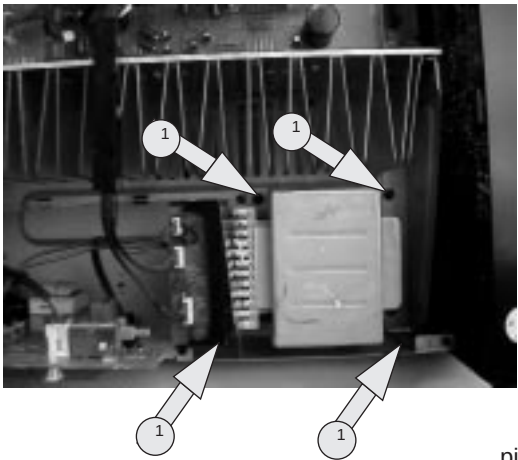


- 1) Remove power rod
- 2) Remove 4x screw as shown in picture 8

Dismantling of mono board


- 1) Remove front . See picture 1
- 2) Remove whole front (disconnect the wires on the mono board coming from front)

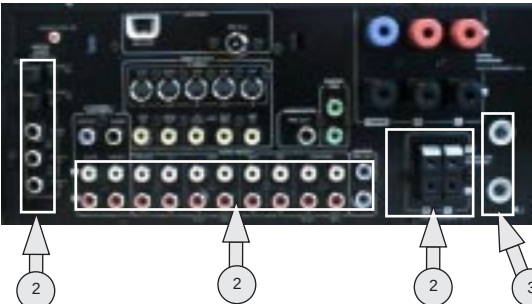

- 3) Remove 14 x screws shown in mentioned aria . See picture 3

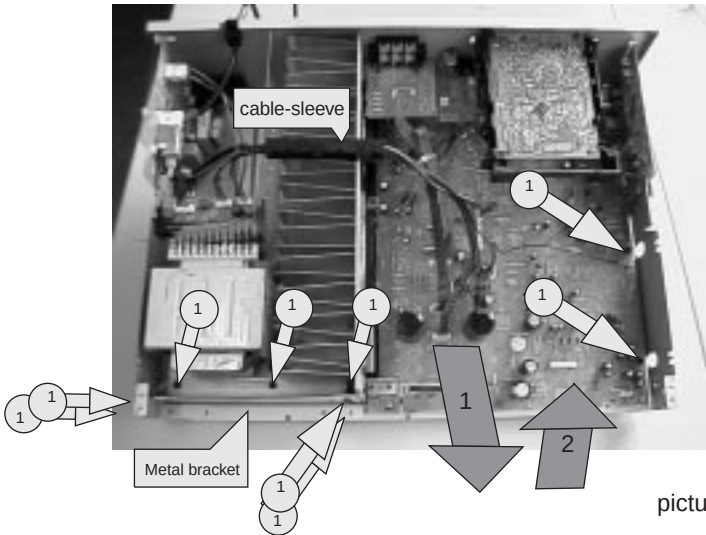

- 4) Remove wires out the cable-sleeve.
- 5) Remove 7 x screw and remove metal bracket
- 6) Remove 2 x screw on mono board . See pictue 4
- 7) Remove mono board as shown arrow 1 & 2 . See picture 4
- 8) Bring the mono board in the service position as shown in picture 5

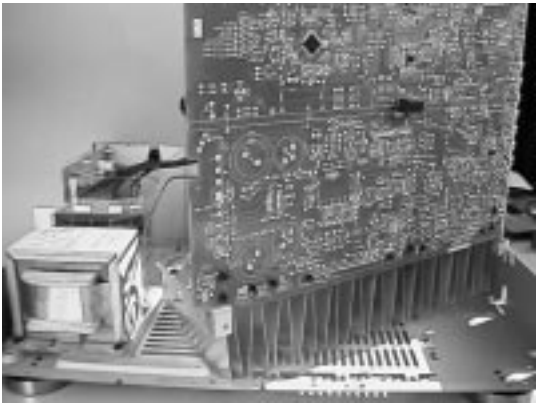


picture 5

Legend

- ① → = Torx M3x6mm (screw with big head)
- ② → = Torx 3x10mm
- ③ → = Torx M3x6mm

Service position monoboard


- 1) Bring front in position as shown in picture 6
 - 2) Snap nok of front in bottom to make front stable . See picture 7
 - 3) Connect front wiring back to monoboard.
- *The tuner module doesn't have to be connected. Use an other source (pe.CD)

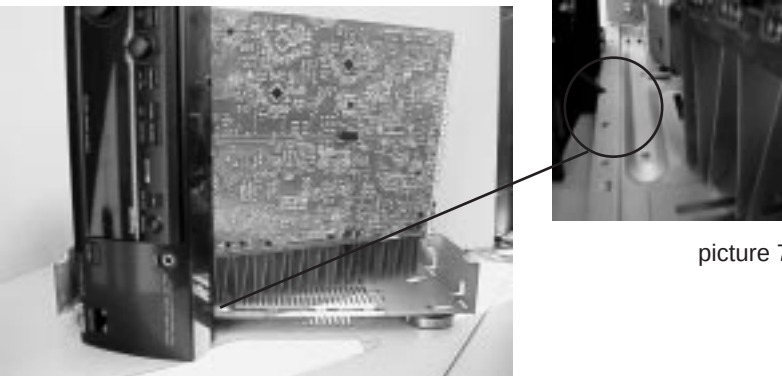

picture 6

picture 7


Service position main trafo

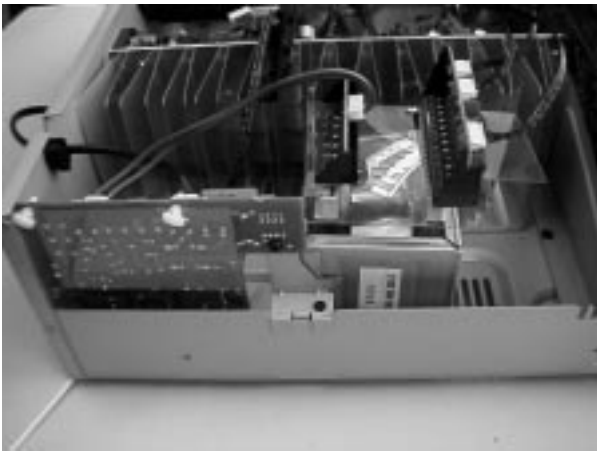

picture 9

- 1) Put main trafo as shown in picture 9

Handling service cover

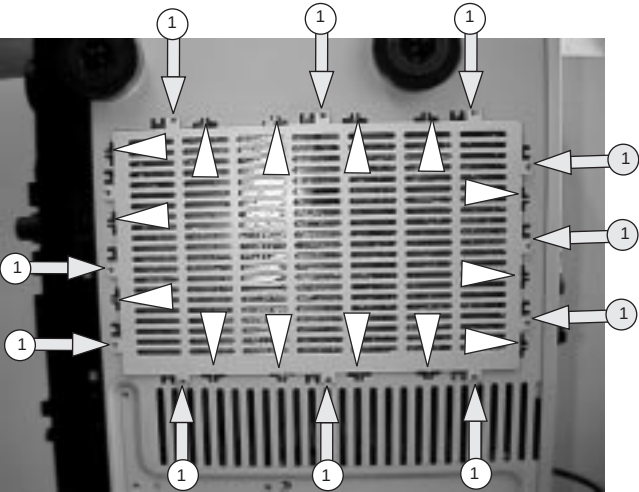


picture 10


- 1) To open the service cover cut 14 x lugs between cover and bottom . See picture 10 (▽)
 - 2) To close the service cover put 11 x screw in mentioned holes. See picture 10
- Service codenumber 12x Torx M3x6mm screw with big head = 4822 502 14659

Dismantling of MDM module

1) Remove all the screws mentioned in the arial . See picture 11

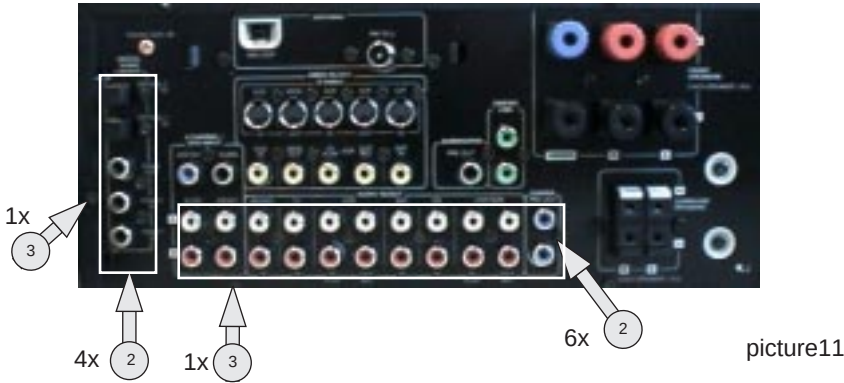

2) Remove backplate a little backwards. See arrow 1 (picture 12)
3) Pull module out the set as shown in picture 12

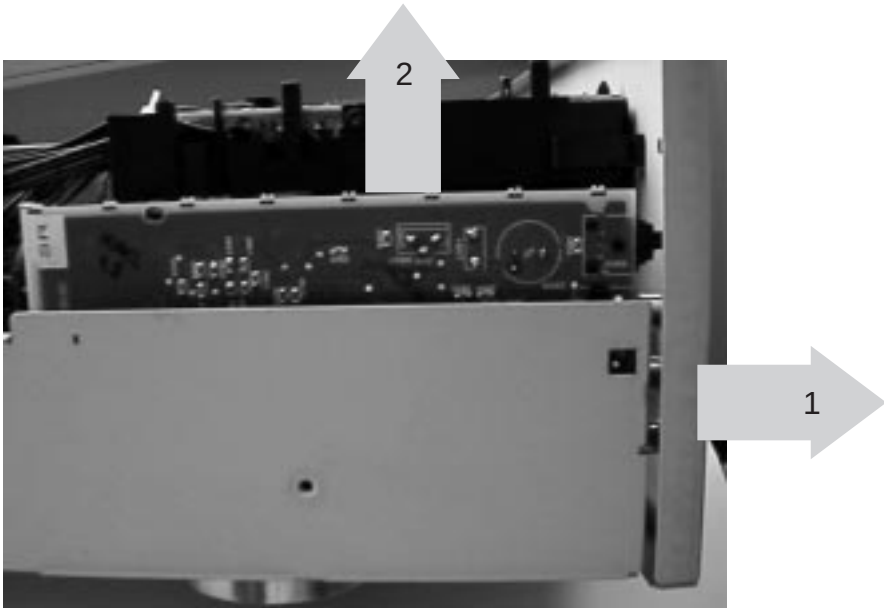


Legend

- 1

= Torx M3x6mm (screw with big head)
- 2

= Torx 3x10mm
- 3

= Torx M3x6mm

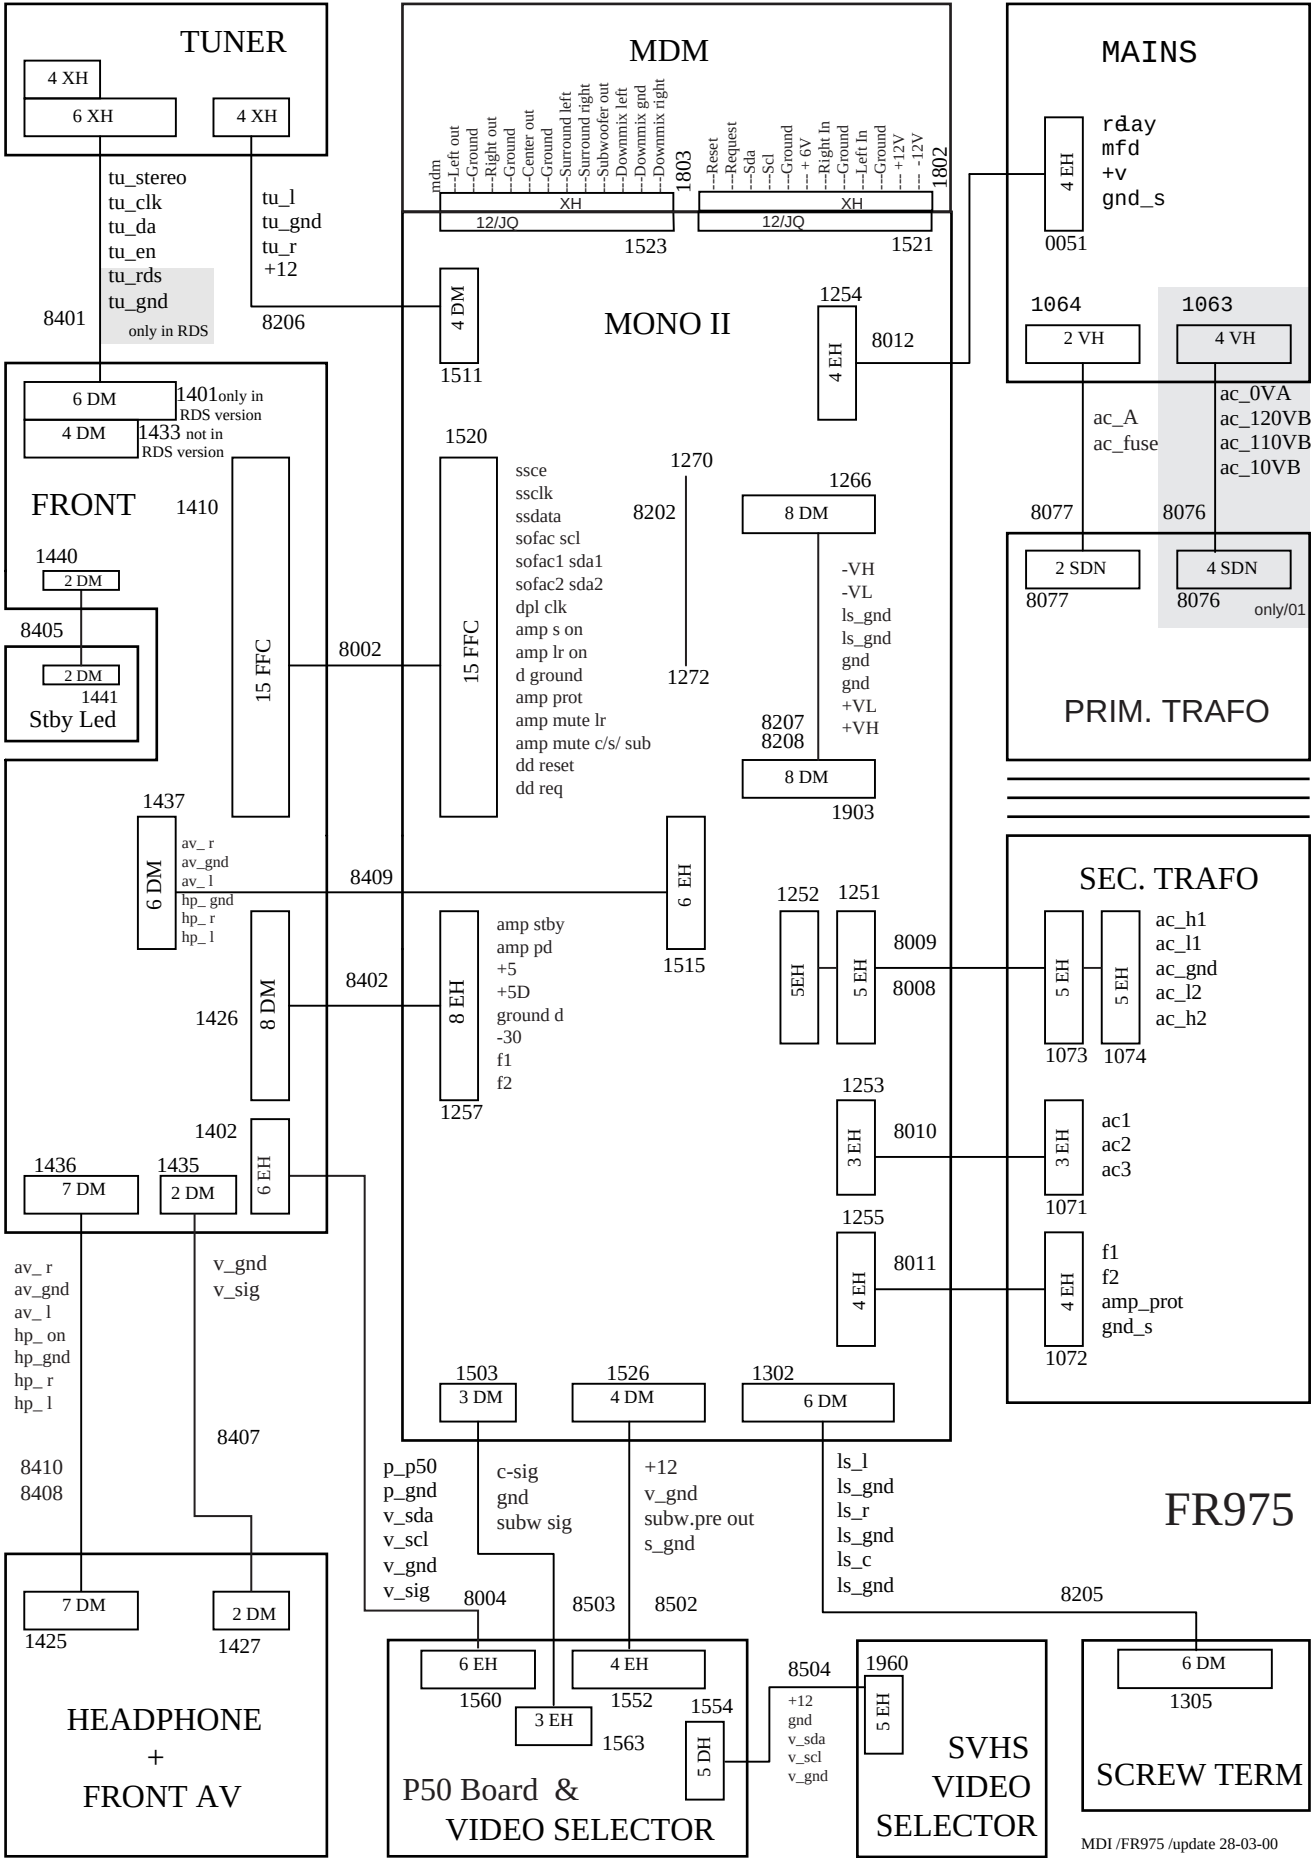


The diagram illustrates a Hi-Fi receiver system, divided into several functional blocks:

- Input Section:** Features a tuner (ECO5/Tuner 95) and a source selector (7501) that routes signals from various inputs (CD, CDR/Tape, VCR, SAT, FRONT AV, TV, PHONO) to the main processing stage. It includes a record path and a 6CH/DVD input section.
- Processing Section:** The core of the system is the MDM 2000 DECODER (7572-b), which handles the audio signals. It is connected to three logic control units (7641, 7642, 7643) that manage gain, volume, and tone. A shift register (7411/7412) and a microprocessor (7415) coordinate the system's operations.
- Output Section:** The processed signals are sent to a multi-channel amplifier (7302) which drives the speakers (Left, Right, Center, Surround Left, Surround Right). It also includes a headphone output (1424) and a subwoofer pre-out (1550).
- Power and Control Section:** A power supply section (1056, 1062) provides the necessary voltages (+12, +5, +5D, +5mute, +V, -12V, -12Vsel). A control section (1421, 1422, 1423) includes a menu navigator, source selector encoder, and volume control. A display (7413) provides visual feedback.
- Protection and Monitoring:** Various protection circuits (1079, 1078, 1077) and monitoring components (1079, 1078, 1077) are included to ensure the system's longevity and safety.

The diagram is a comprehensive technical drawing, likely from a service manual, showing the intricate wiring and component values (resistors, capacitors, inductors) that make up the receiver's internal circuitry.

SERVICE TEST PROGRAM

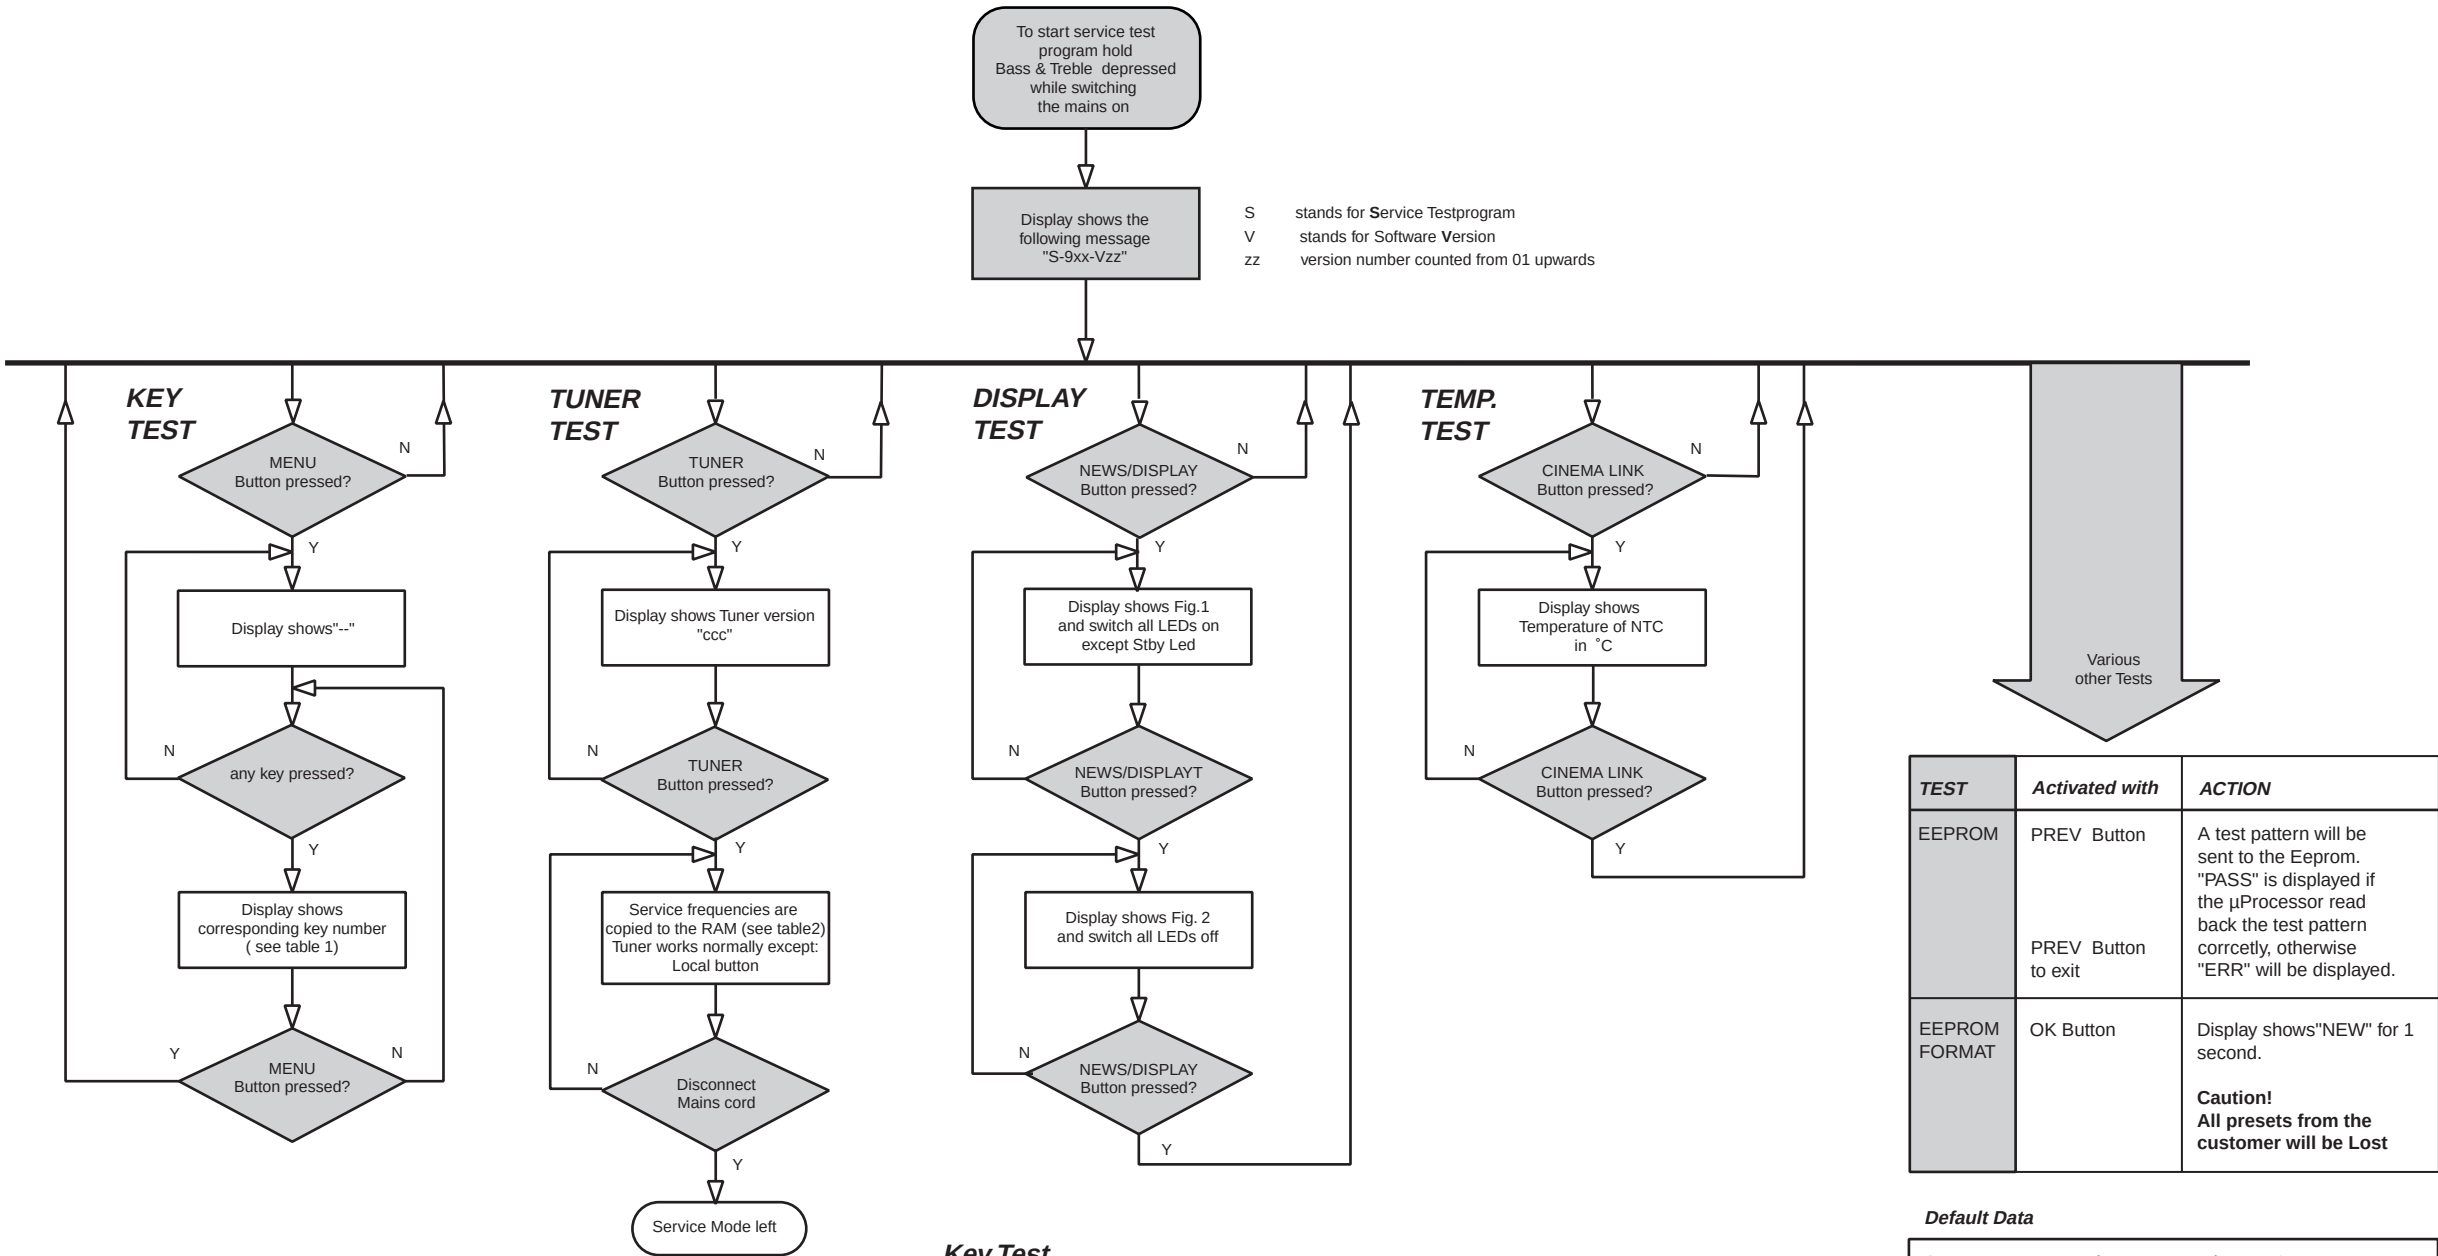

TEST	Activated with	ACTION
EEPROM	PREV Button	A test pattern will be sent to the Eeprom. "PASS" is displayed if the µProcessor read back the test pattern correctly, otherwise "ERR" will be displayed.
EEPROM FORMAT	PREV Button to exit OK Button	Display shows "NEW" for 1 second. Caution! All presets from the customer will be Lost

Tuner Test

Display info Version	Europe "EUR" /00	East Eur. 3-band "EEL" /14	East Eur. 2-band "EEU" /14	USA "USA" /17	Oversea "OSE" /01
Preset 1	87.5MHz	65.81MHz	65.81MHz	87.5MHz	87.5MHz
2	108MHz	108MHz	108MHz	108MHz	108MHz
3	531kHz	74MHz	74MHz	530kHz	531kHz
4	1602kHz	87.5MHz	87.5MHz	1700kHz	1602kHz
5	558kHz	531kHz	531kHz	560kHz	558kHz
6	1494kHz	1602kHz	1602kHz	1500kHz	1494kHz
7	153kHz	558kHz	558kHz	98MHz	----
8	279kHz	1494kHz	1494kHz	----	----
9	198kHz	153kHz	98MHz	----	----
10	98MHz	279kHz	70.01MHz	----	----
11	----	198kHz	----	----	98MHz

This table is valid for all types of tuners.
Customer presets will not be changed after this Tuner test.
If a station is tuned then the display flag "OK" will be ON otherwise it will be OFF.
If the tuned frequency is carrying RDS information, the display flag "RDS" will be ON.
Oversea version: the tuning grid can be switched between 9kHz and 10kHz by pressing the key "TUNER" for longer than 2 seconds. "Grid 9" or "Grid10" will be shown accordingly.
Grid 9kHz is in FM 50kHz, Grid 10kHz is in FM 100kHz
Europe version: the LW can be switched On and Off by pressing the key "TUNER" for longer than 2 seconds. LW OFF or LW ON will be shown accordingly.

Table 2

Key Test

Key	Number	Key	Number	Key	Number
Cinema	1	Sens	7	Loudness	13
Surr. on/off	2	*News T/A	8	Bass	14
Surr. Mode	3	Prev.Exit	9	Treble	15
Virt. Mode	4	Setup Menu	-	*Front A/V	16
Tuner	5	Next	11		
*Radio Text	6	Enter/OK	12		

*Button Radio Text change in Name/Frequency in /01/17 version
Button News T/A change in Display in /01/17 version
Button Front A/V not in FR965

Table 1

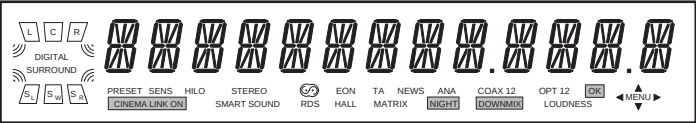


Figure 1


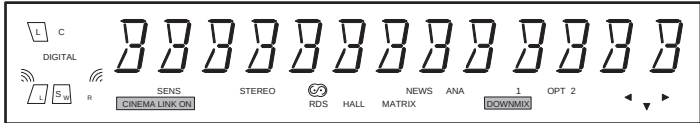


Figure 2

mdi 04-04-00

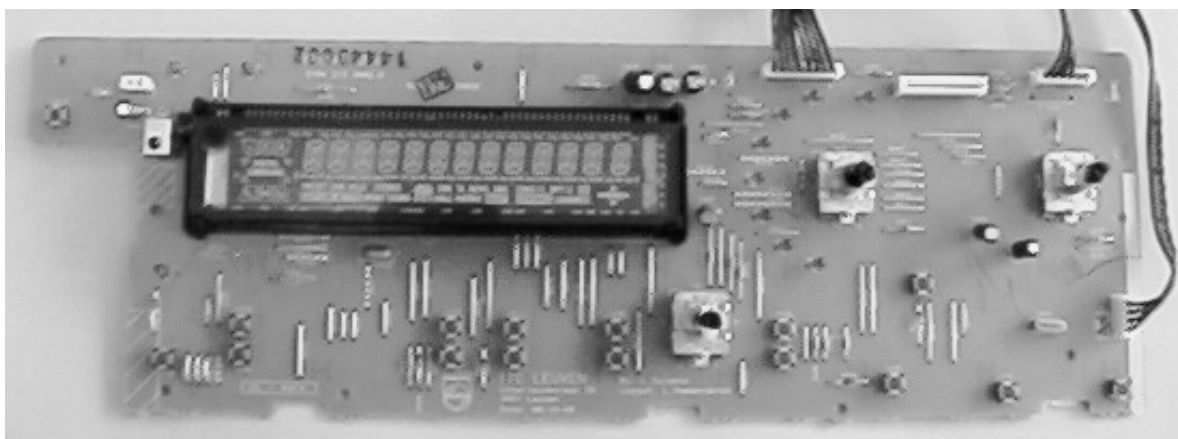


FRONT BOARD

TABLE OF CONTENTS

FTD Display pin connections.....	6-2
Headphone & Led board layout	6-3
Circuit diagram	6-4
Component layout	6-5
Partslst	6-6

FTD DISPLAY PIN CONNECTIONS

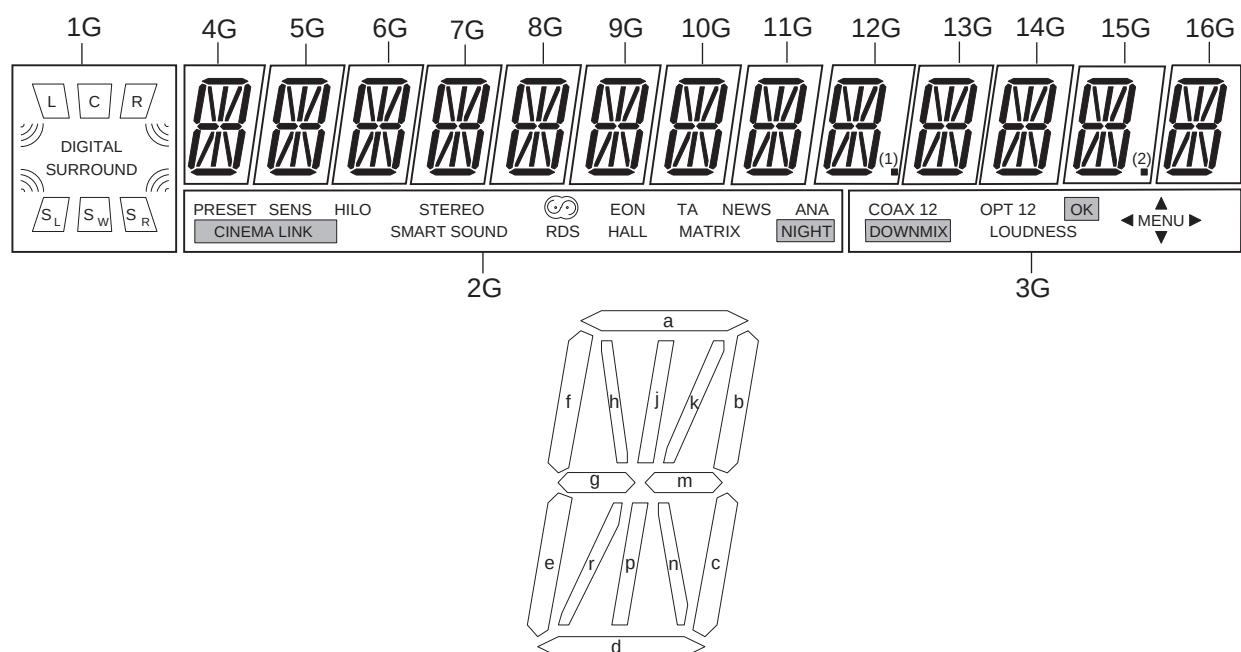


	1G	2G	3G	4G~11G	12G	13G ,14G	15G	16G
P1		MATRIX		a	a	a	a	a
P2			COAX	j p	j p	j p	j p	j p
P3	C	ANA	1 _(coax)	h	h	h	h	h
P4	 (C)	LO	2 _(coax)	k	k	k	k	k
P5	 (S _L)		OPT	b	b	b	b	b
P6	 (S _R)	EON	1 _(opt)	f	f	f	f	f
P7	 (S _w)	HALL	2 _(opt)	m	m	m	m	m
P8	S _(L)	HI	LOUDNESS	g	g	g	g	g
P9	L	NEWS		c	c	c	c	c
P10	S _(R)	PRESET	MENU	e	e	e	e	e
P11	R			r	r	r	r	r
P12		SMART SOUND		n	n	n	n	n
P13		STEREO		d	d	d	d	d
P14	SURROUND	TA		-	■ (1)	-	■ (2)	-
P15	DIGITAL	SENS	-	-	-	-	-	-

Pin Connection


[illegible][illegible]

Note: FI , F2 ----- Filament
NC ----- No connection
NP ----- No pin
1G ~ 16G ----- Grid


HEADPHONE BOARD - COMPONENT VIEW

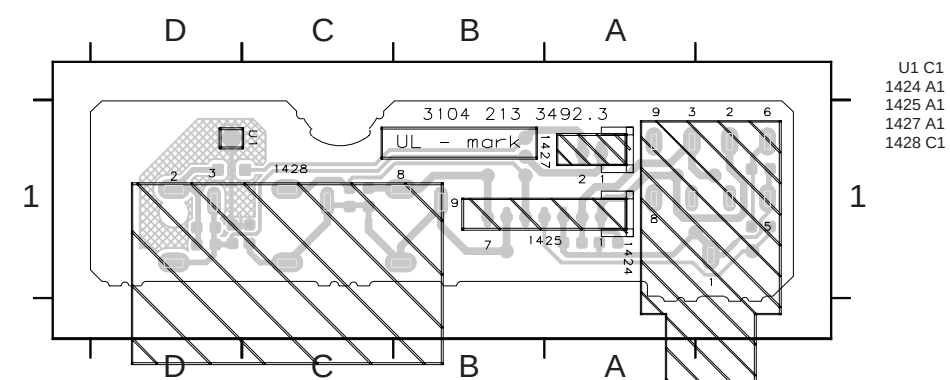



HEADPHONE BOARD - COPPER SIDE VIEW

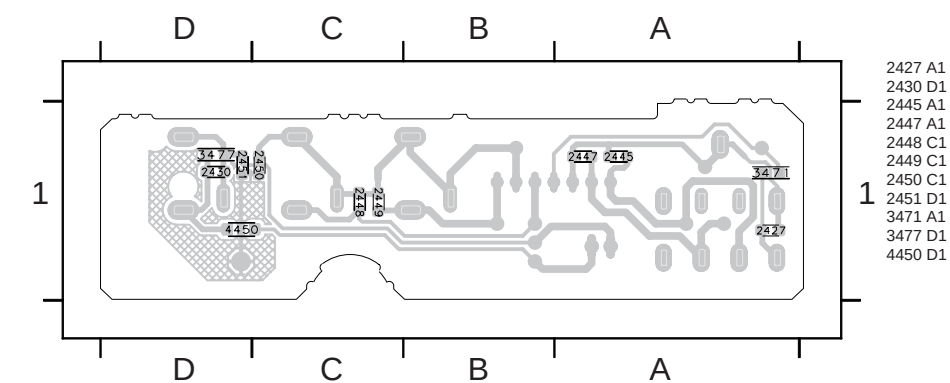

LED BOARD - COMPONENT VIEW

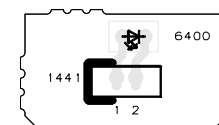

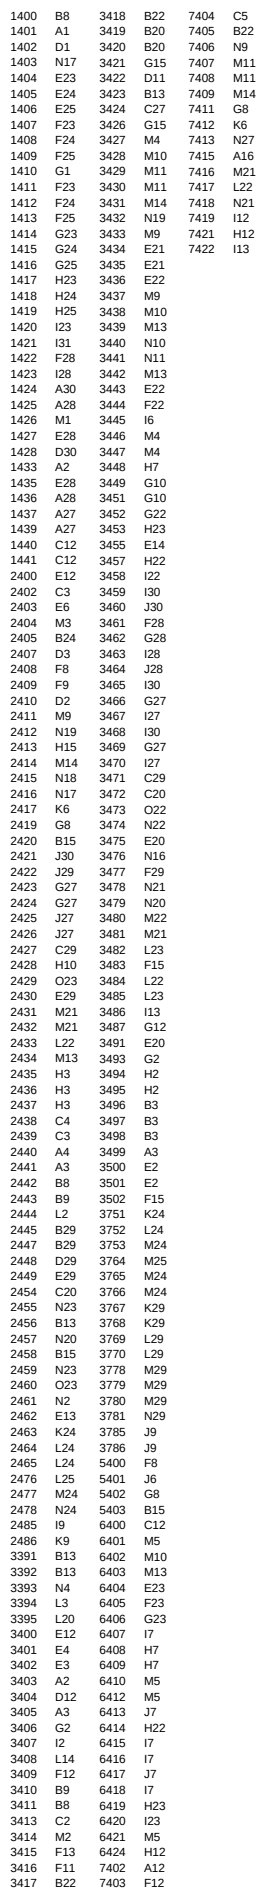

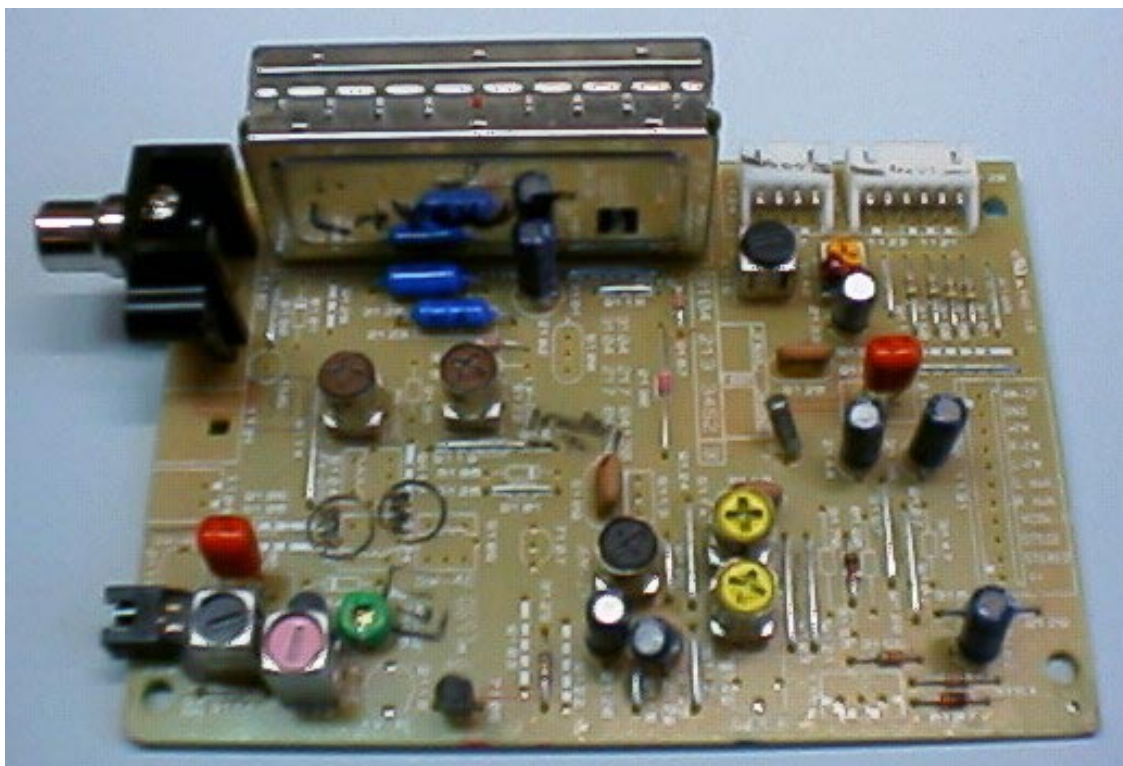


TUNER 95 BOARD

TABLE OF CONTENTS

Adjustment table	7A-2
Blockdiagram	7A-3
Component layout	7A-4
Circuit diagram	7A-5
Partslist	7A-6


TUNER 95 bis Adjustment Table (FM, MW, LW with Frame antenna)


Waverange	Input frequency	Input	Set tuned to	Adjust	Output	Scope / Voltmeter
VARICAP ALIGNMENT						
FM (50) 87.5 - 108 MHz			108 MHz	check		7 ... 9V
			87.5 MHz	check		1.3 ... 2V
MW (9) 531 - 1602 kHz			1602 kHz	5123		8.3V ± 0.2V
			531 kHz	check		1V ± 0.4V
LW (3) 153 - 279 kHz			279 kHz	5122		8.3V ± 0.2V
			153 kHz	check		1V ± 0.4V
FM – DETECTION						
FM	98 Mhz 1mV continuous wave <i>short pin 21 (IC7101) to ground</i>		98 MHz	5107	 	0mV ± 3mV
FM – VCO						
FM	98 Mhz 1 mV continuous wave		98 MHz	3142		152kHz ± 1 kHz
DISTORTION						
FM	98 Mhz 1 mV 90 % L + 9 % pilot mod = 1kHz		98MHz	mixcoil inside Tuner 1110		Distortion minimum
AM – IF						
MW	450kHz Δf = 10kHz Low as possible Swept signal	 	MW	5111		symmetrical and max. height 
	5112					
	450kHz continuous wave			5114	 	0mV ± 2mV
AM - RF						
MW	558kHz Mod = 1kHz 30 % AM 1494 kHz	 *	558kHz	5102		MAX 
			1494kHz	2106		
LW	198kHz mod = 1kHz 30 % AM		198kHz	5103		MAX


* Signal send via a frame antenna
(..) = tuning grid in kHz

 repeat

adjtable for 3104 217 04121/04341

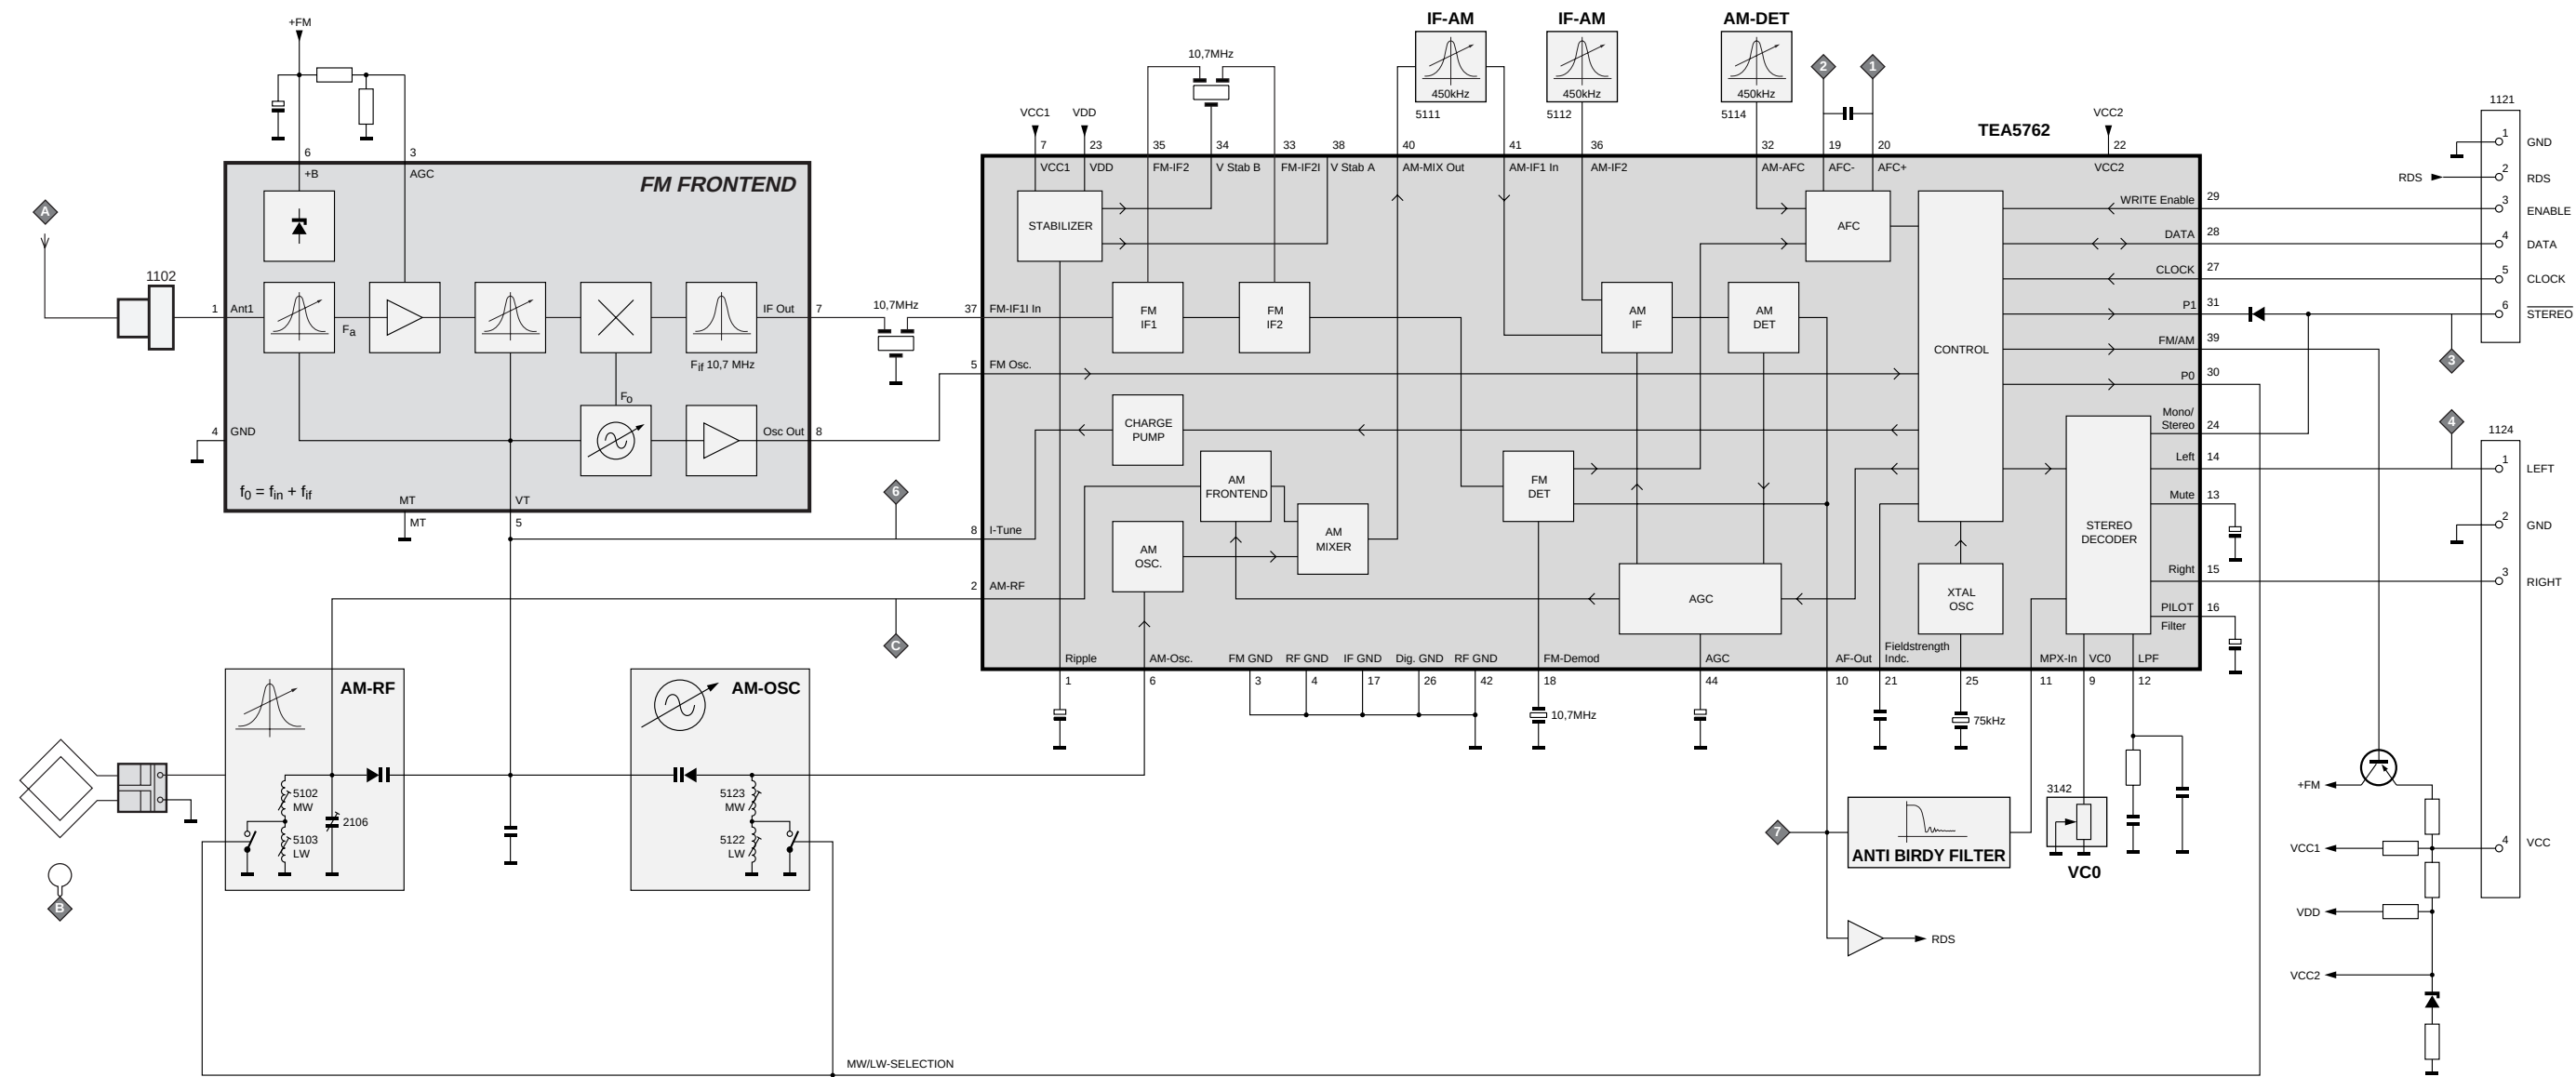

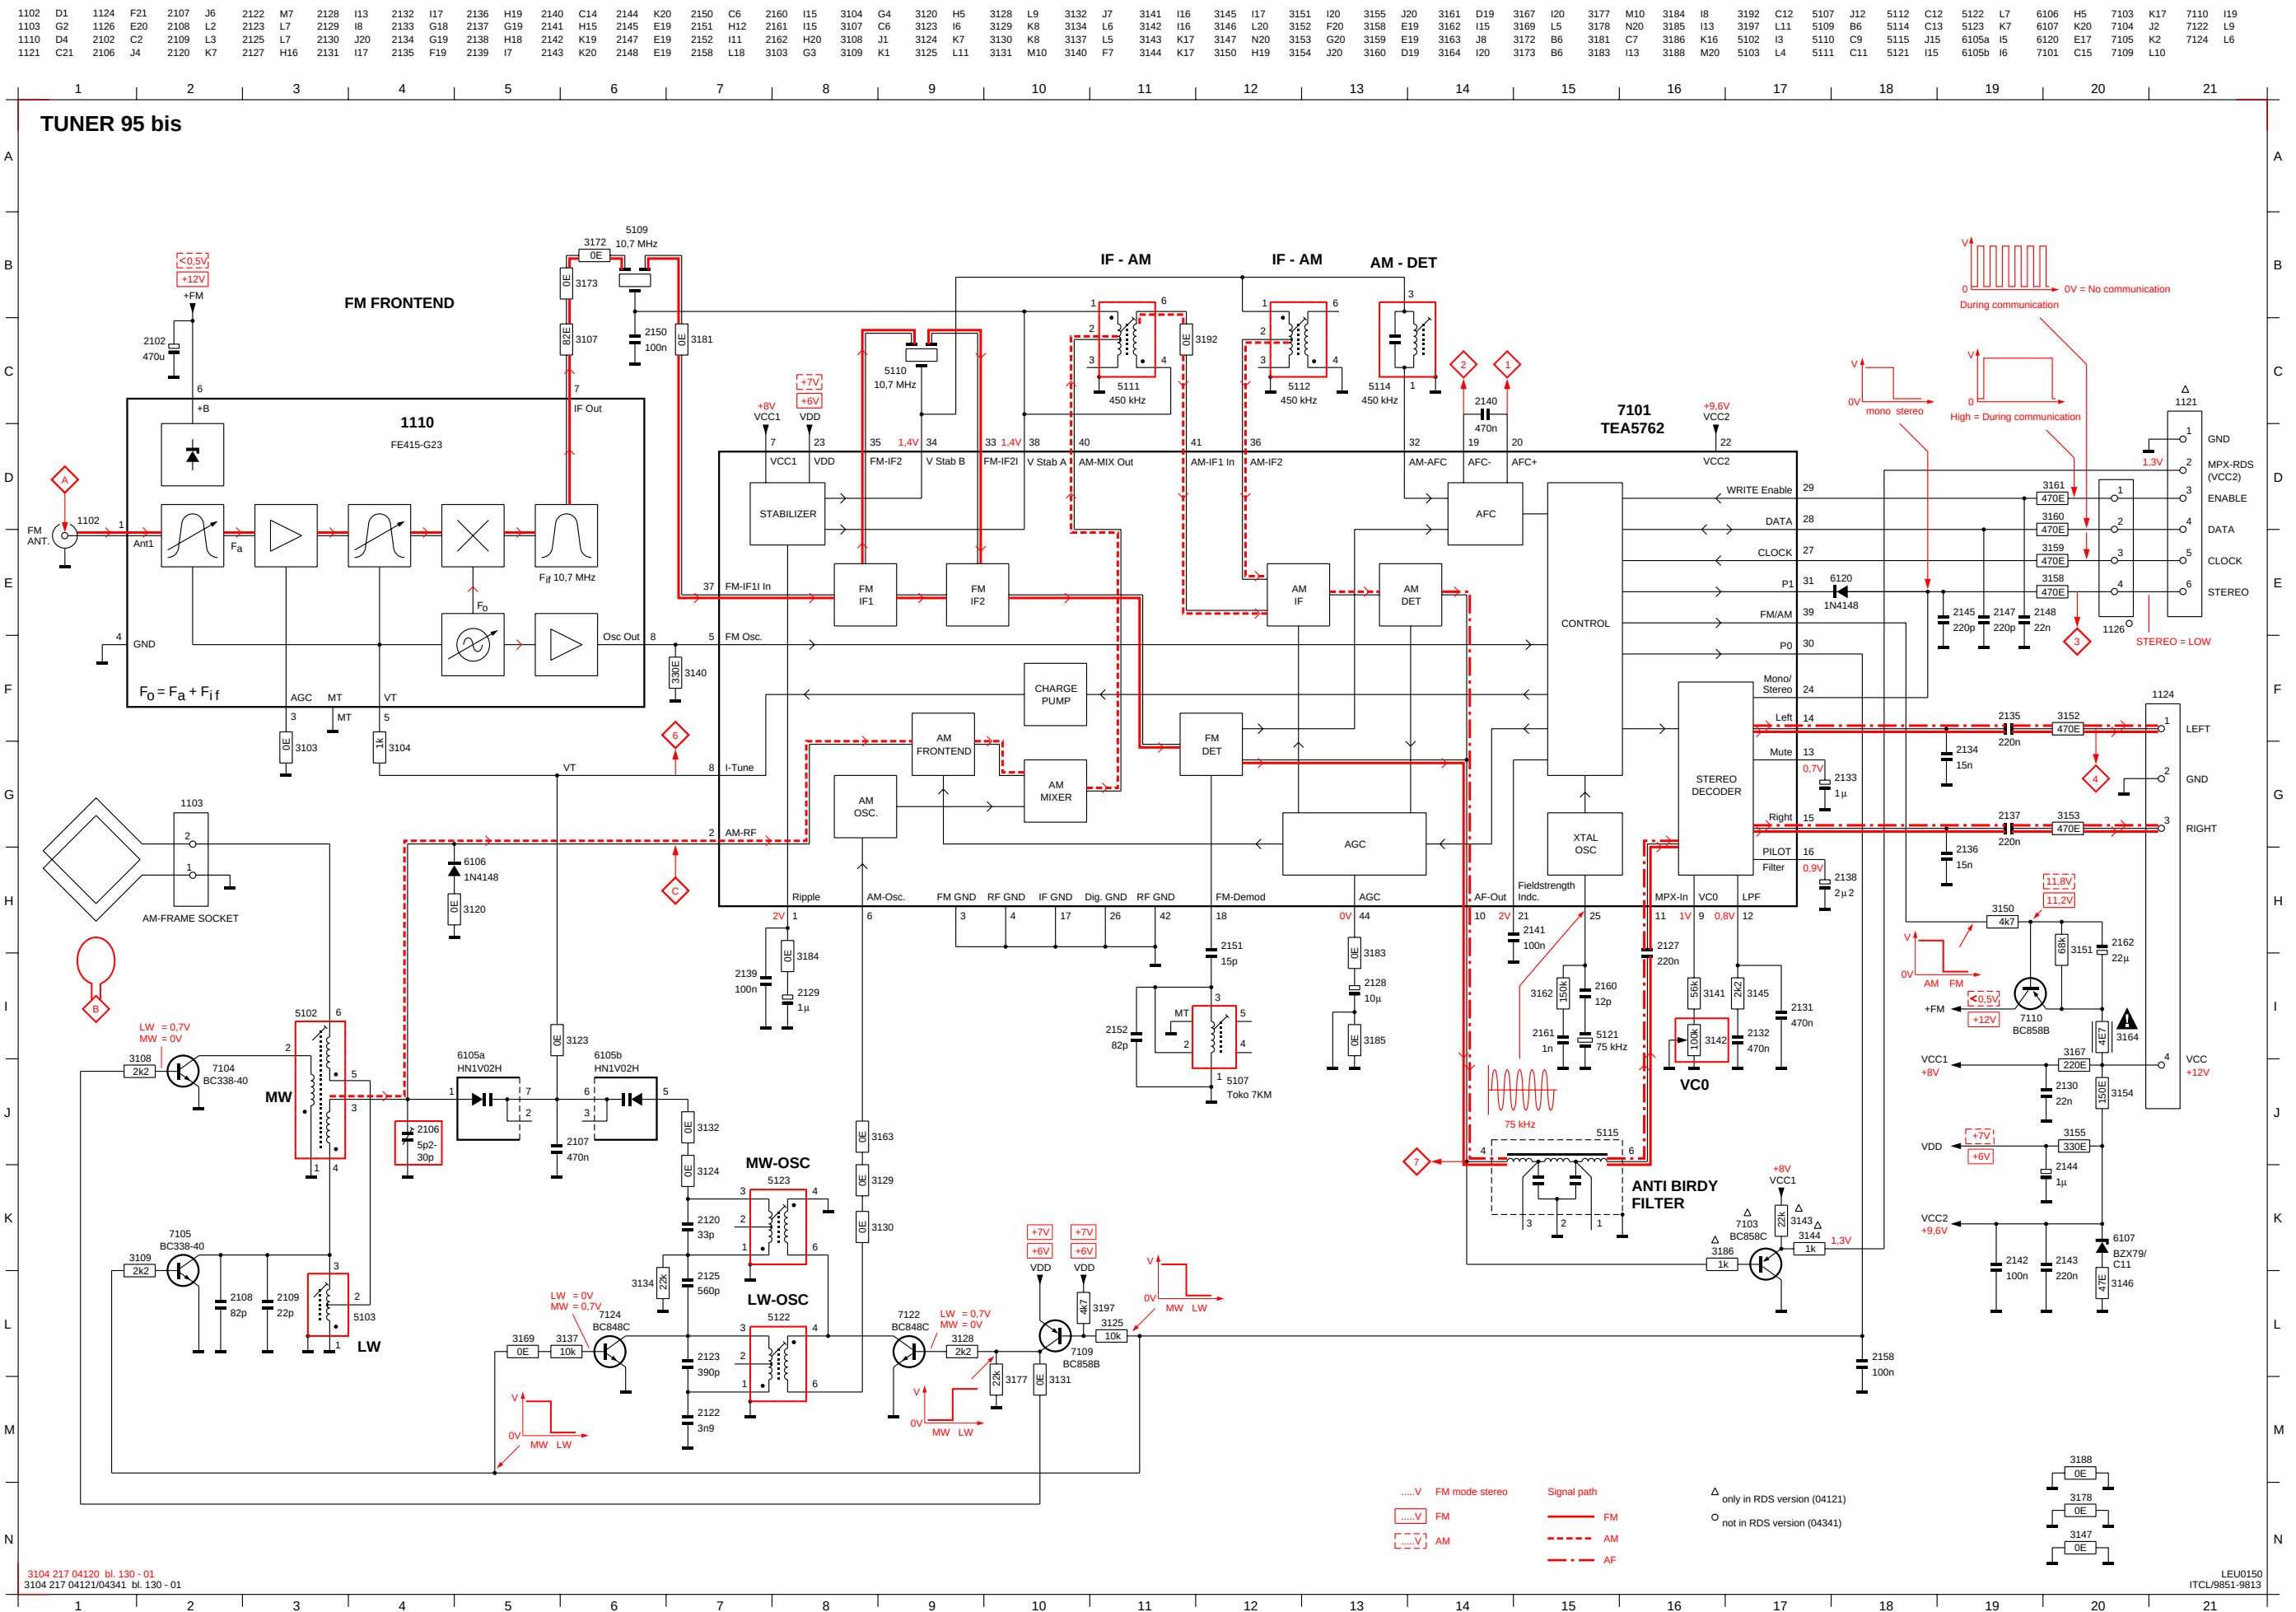


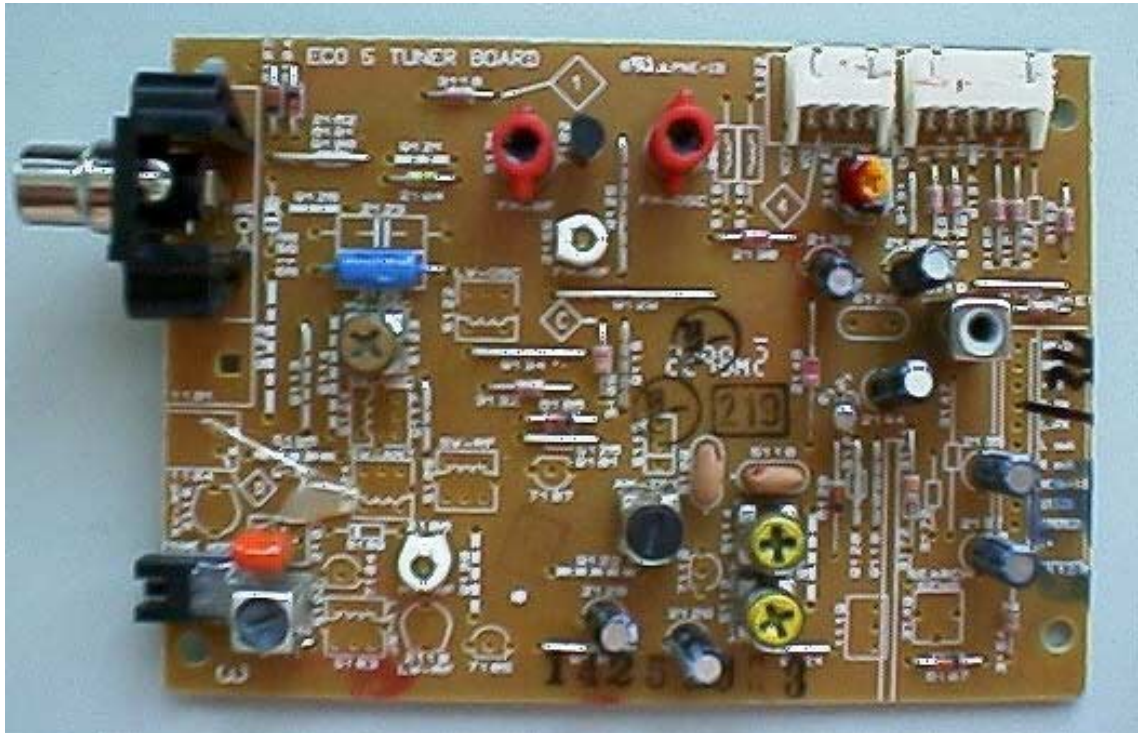


TUNER BOARD ECO5


TABLE OF CONTENTS

Blockdiagram	7B-1
Component layout	7B-2
Adjustmanttable	7B-2
Circuit diagram	7B-3
Partslist	7B-4

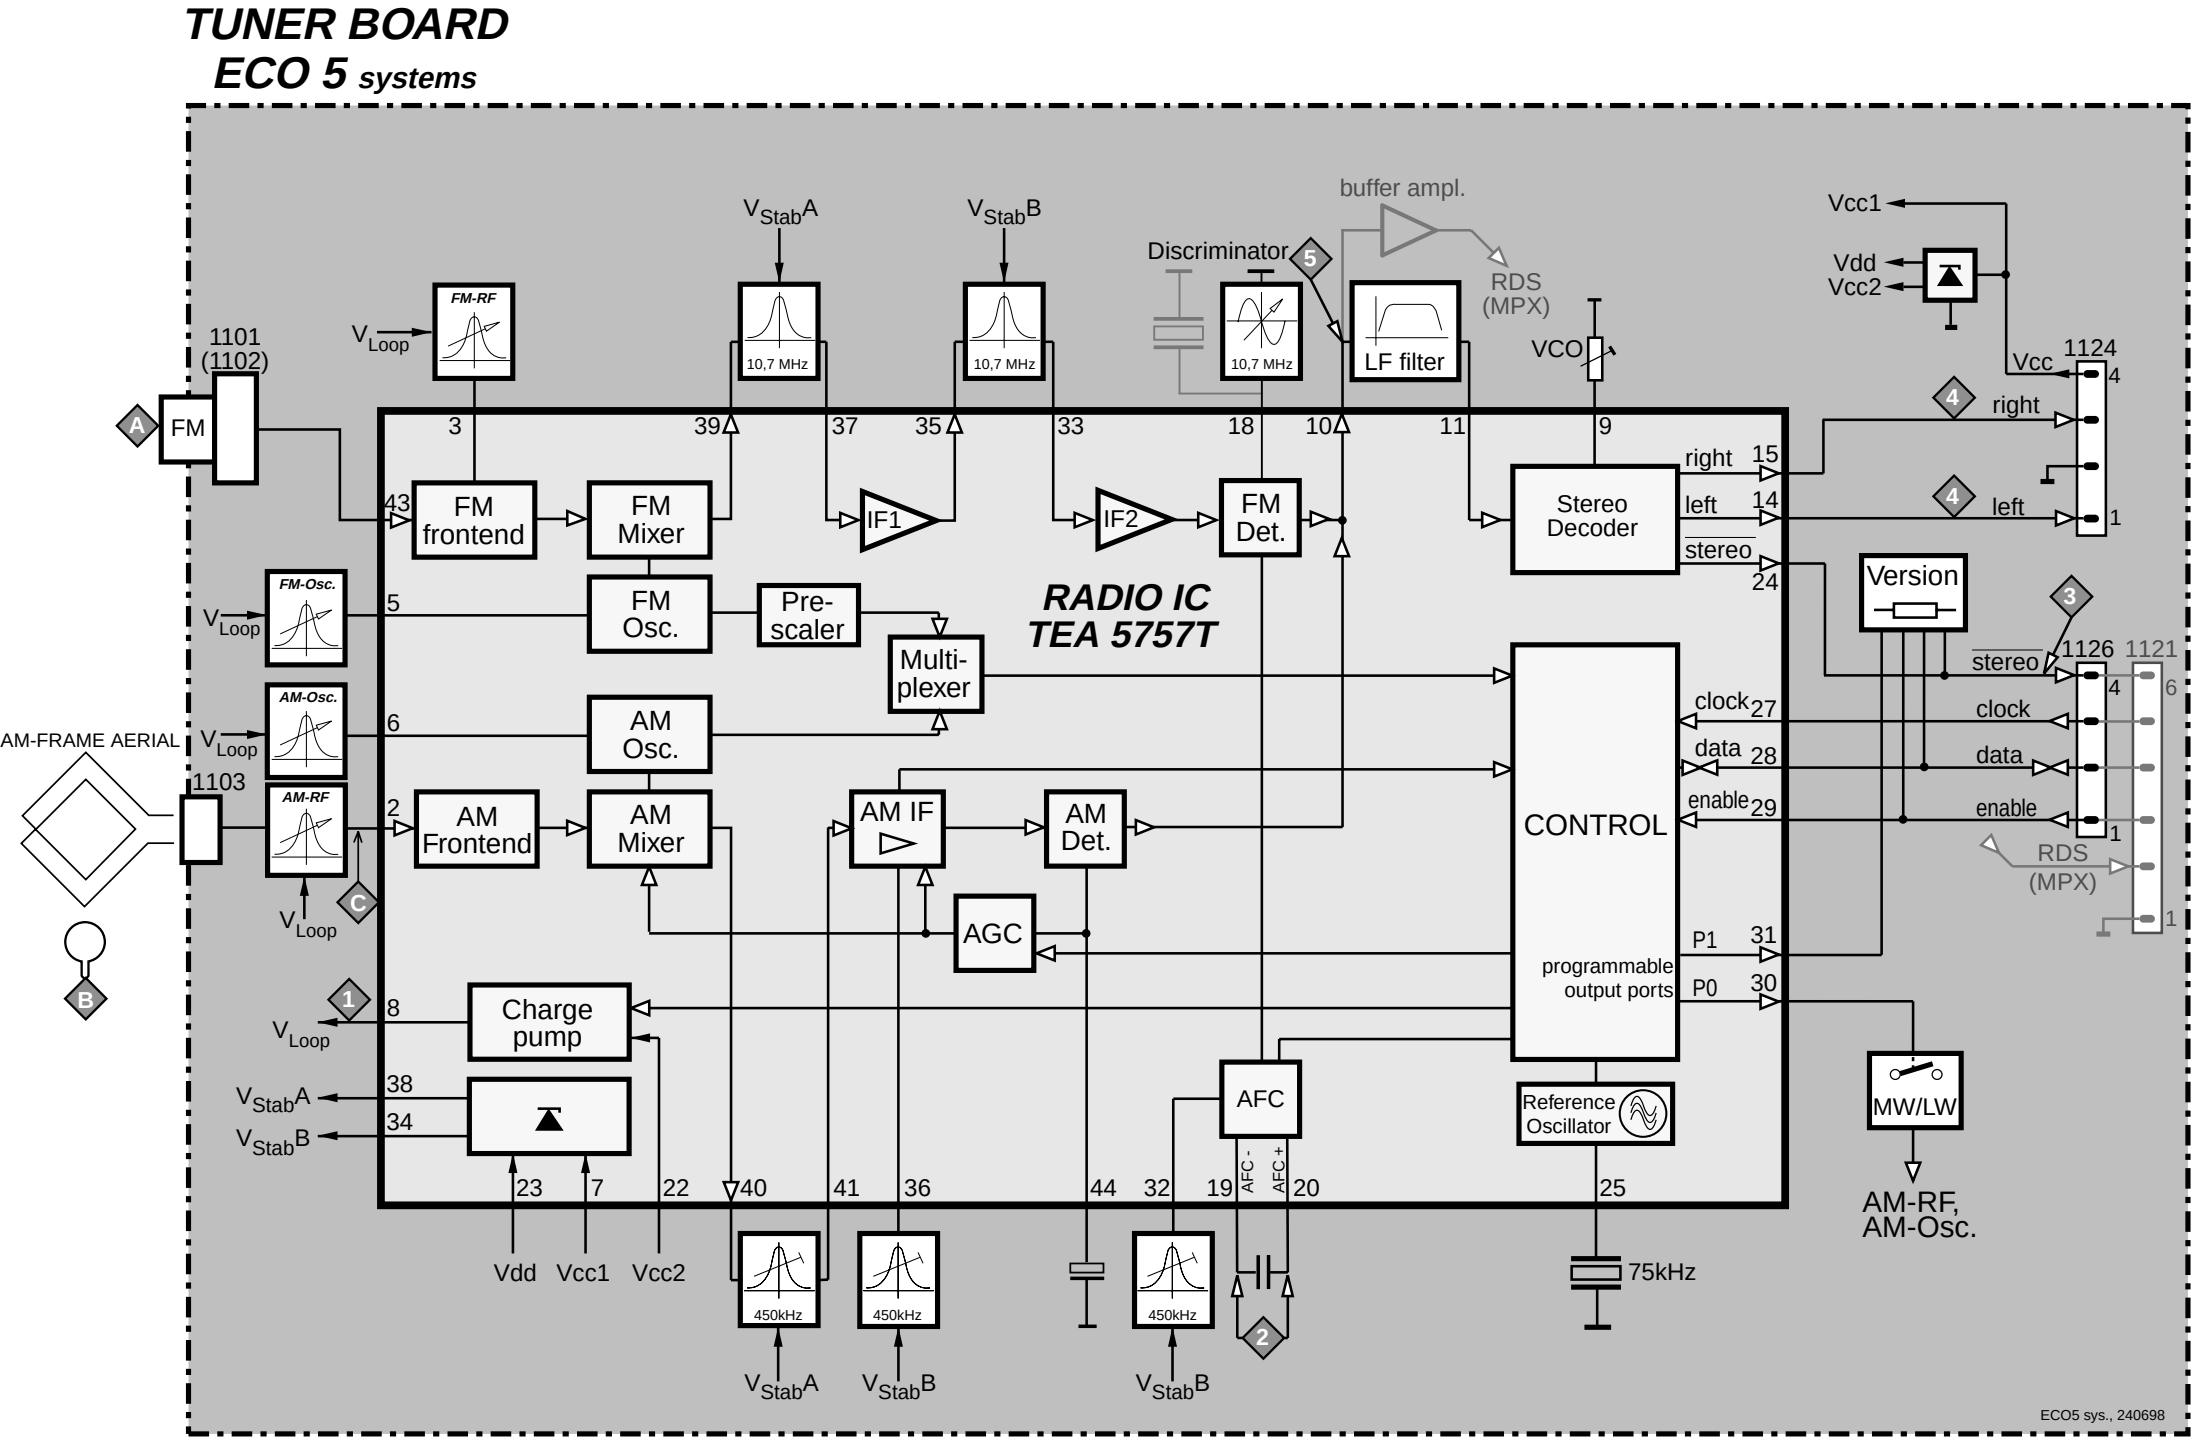

TUNER BOARD ECO5 / Systems

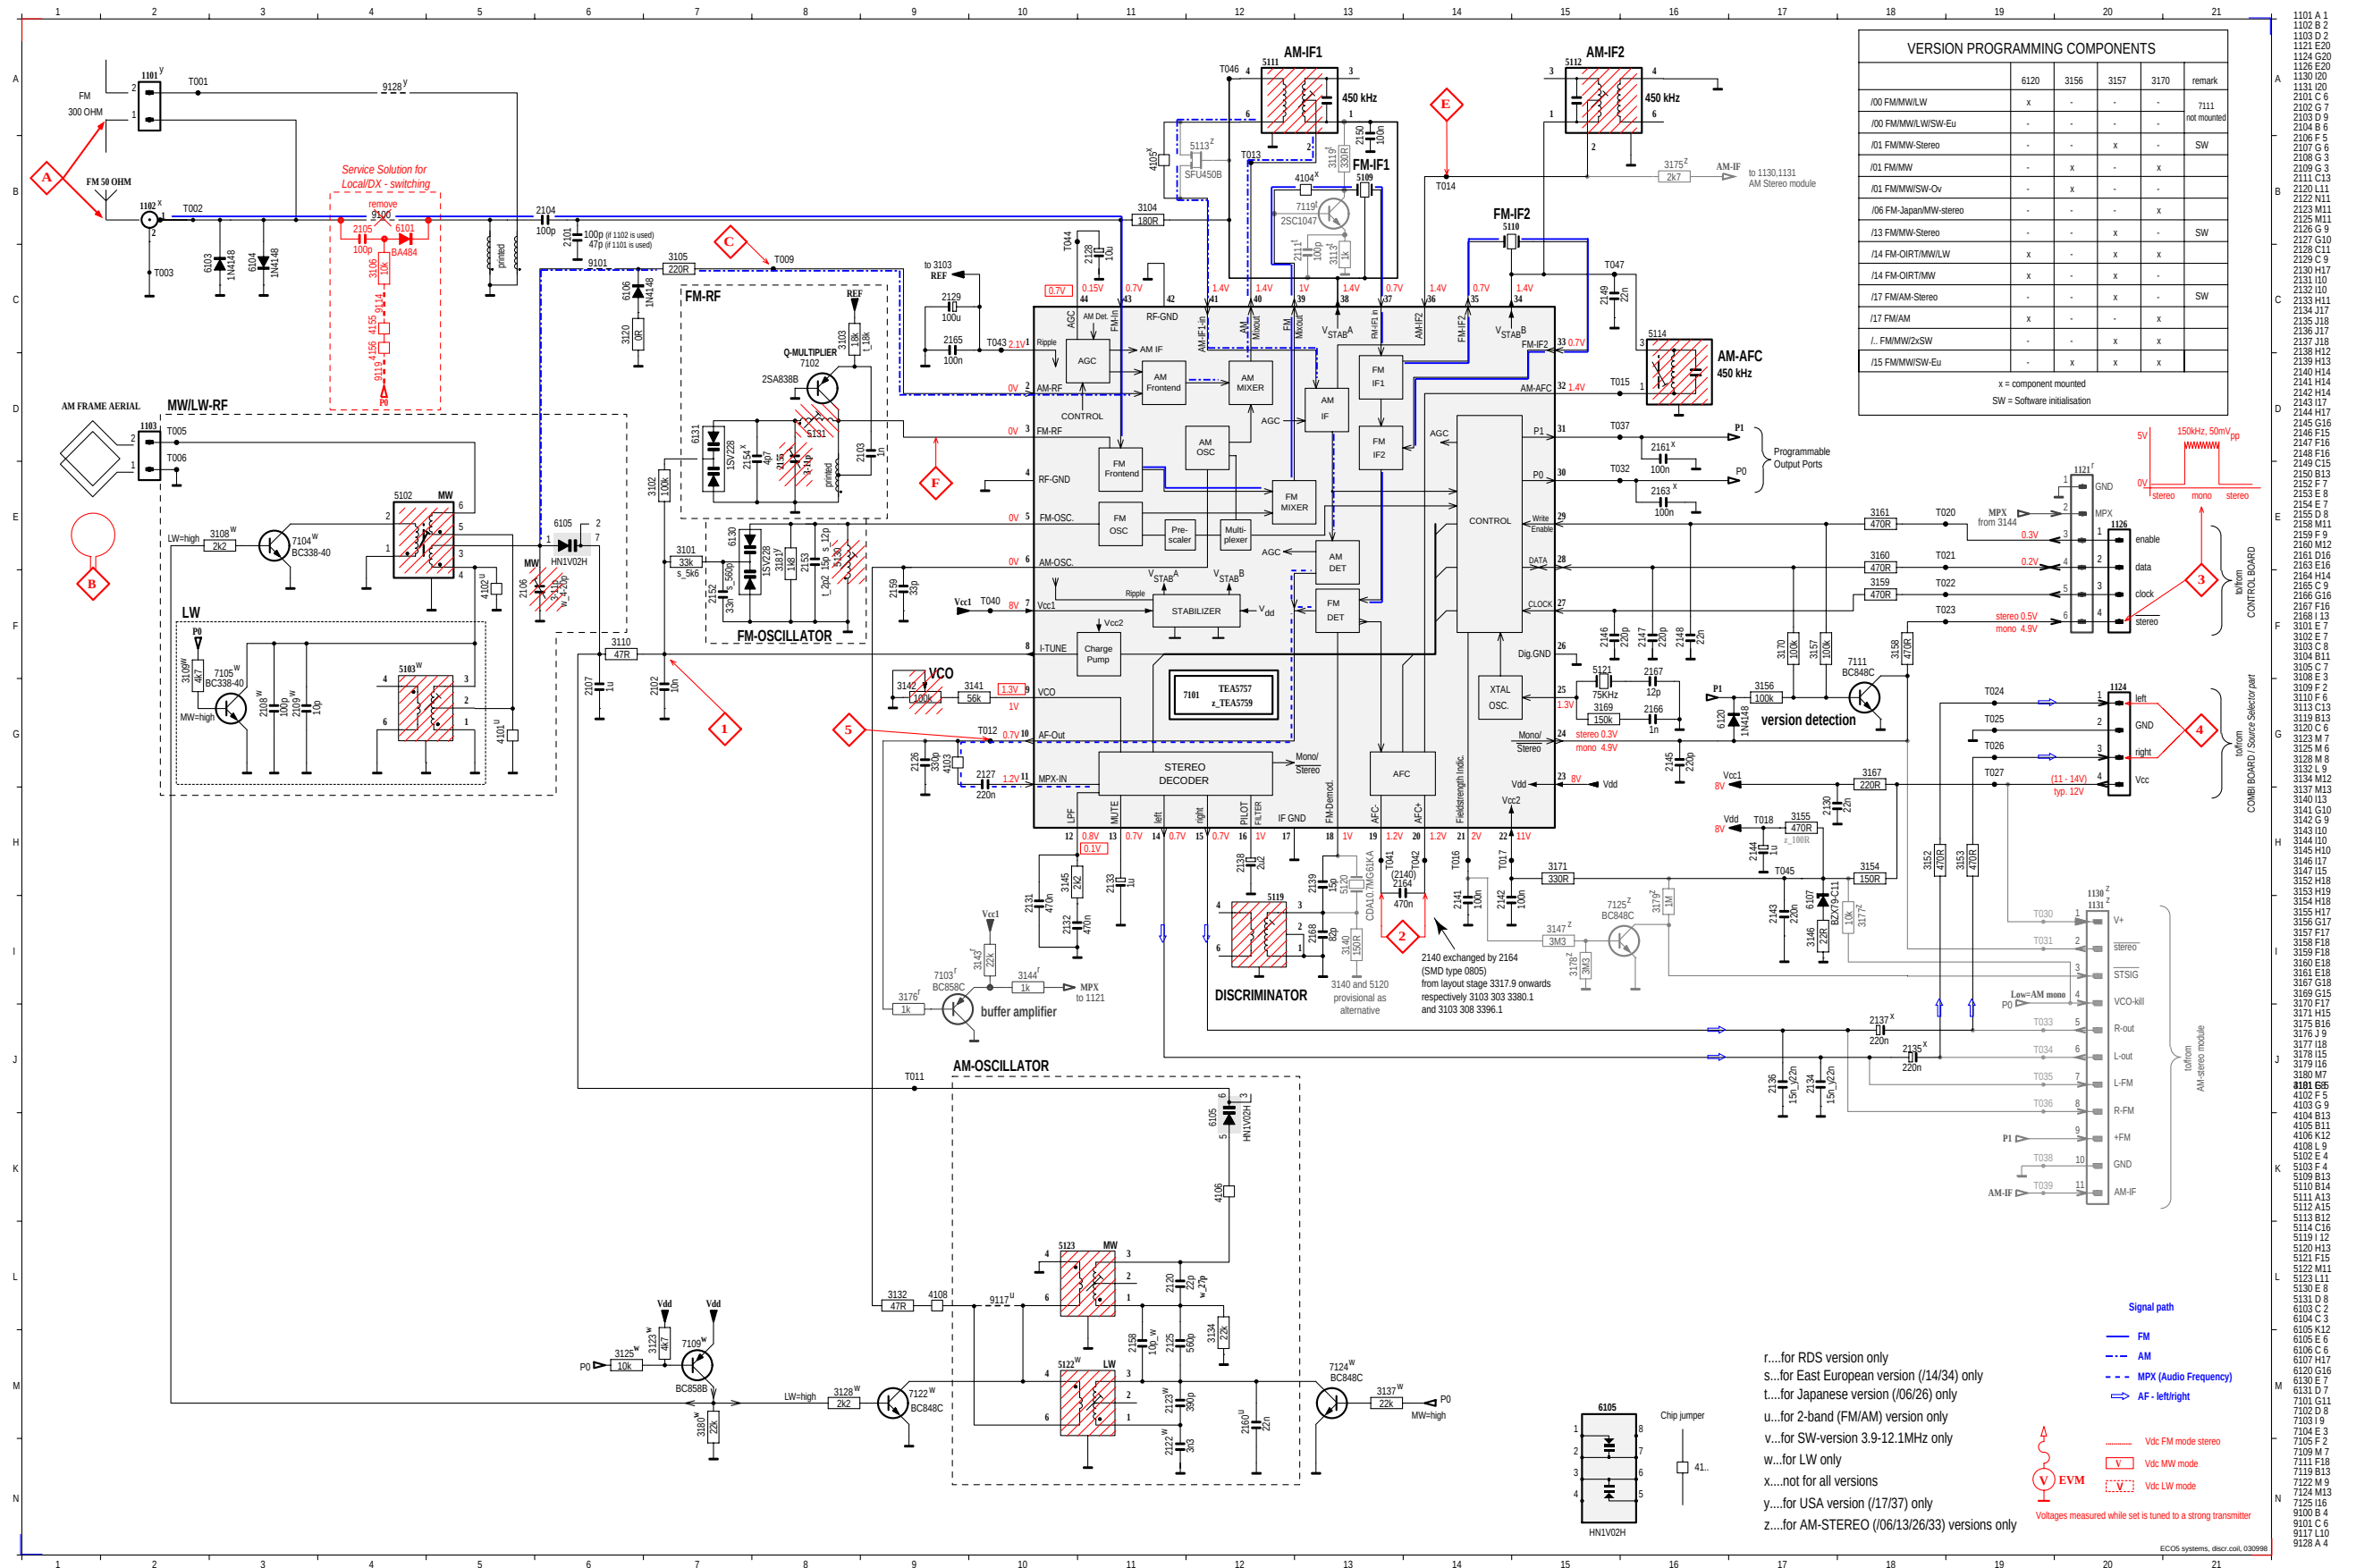

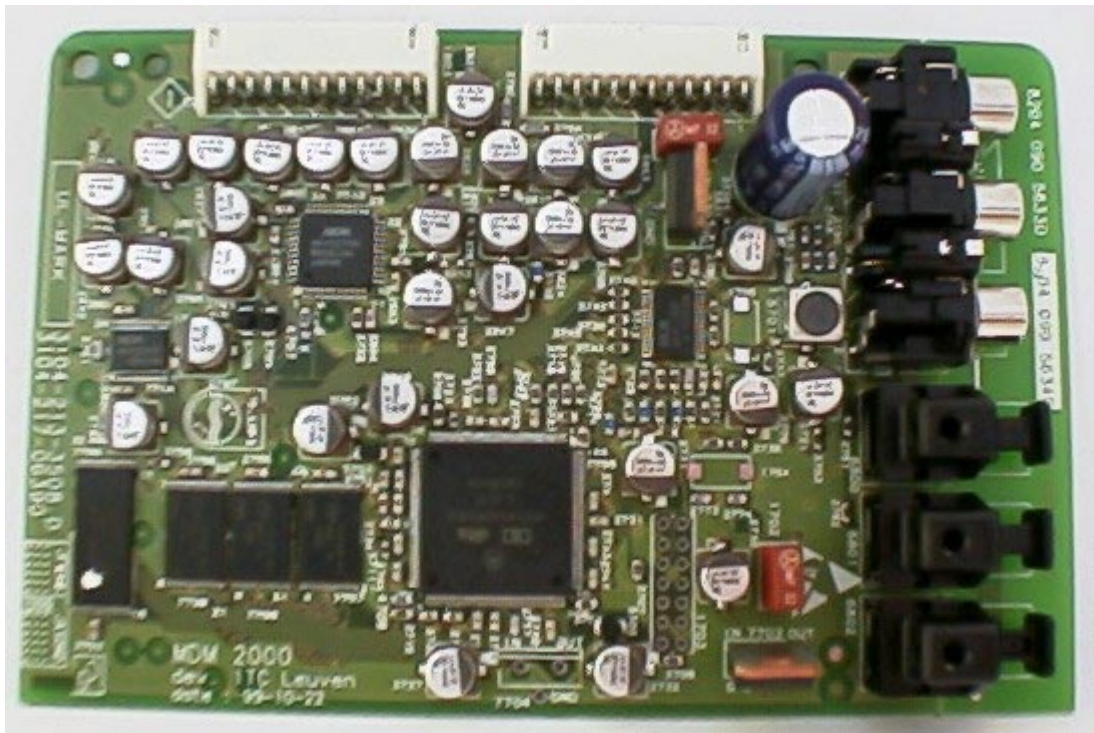


MULTI-CHANNEL DECODING MODULE

TABLE OF CONTENTS


Troubleshooting	8-2
Block-diagram	8-3
Partslist	8-4

MULTI-CHANNEL DECODING MODULE - Troubleshooting

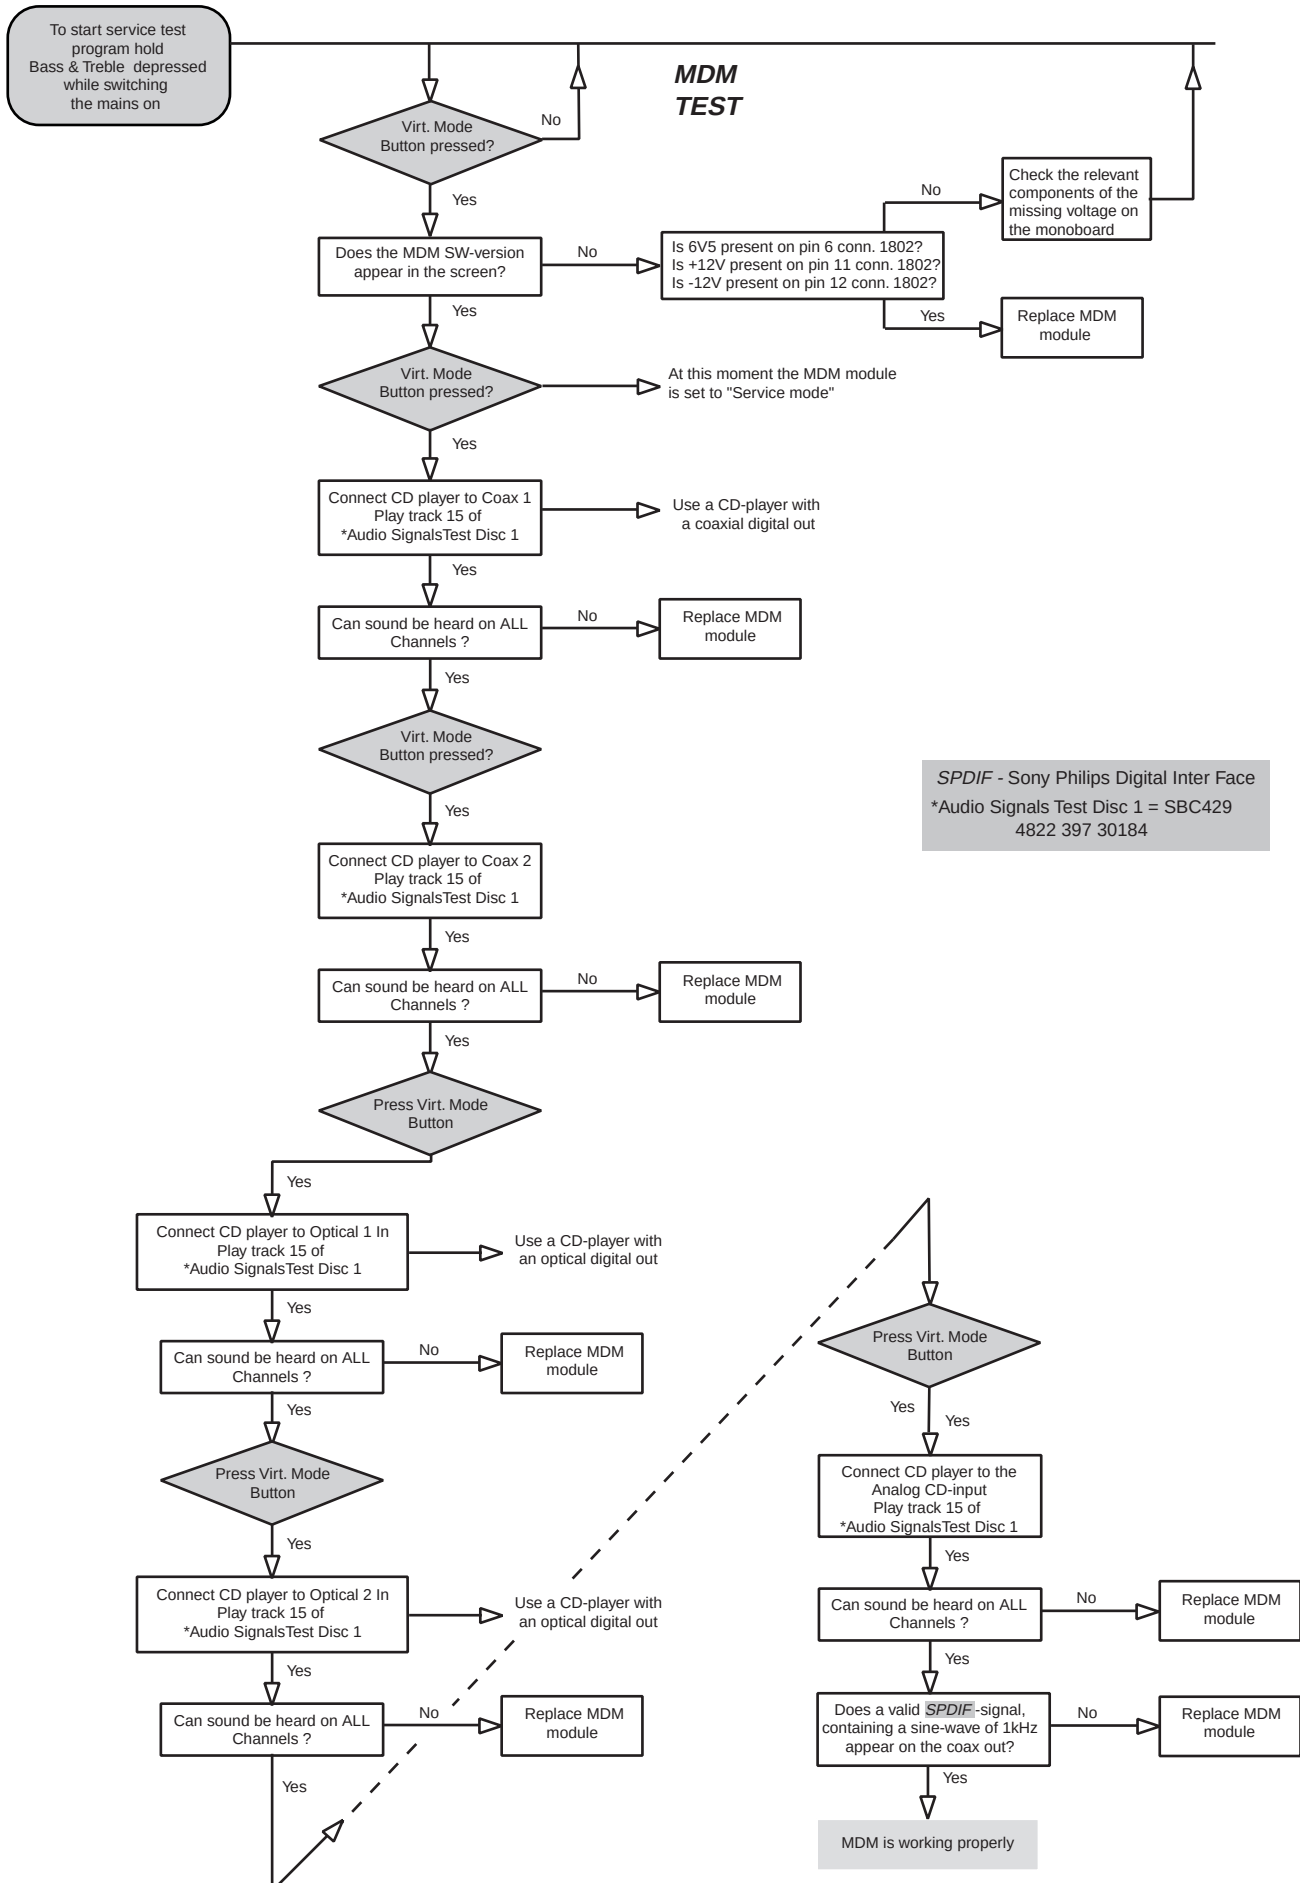

MULTI CHANNEL DECODING MODULE 2000



MDM200

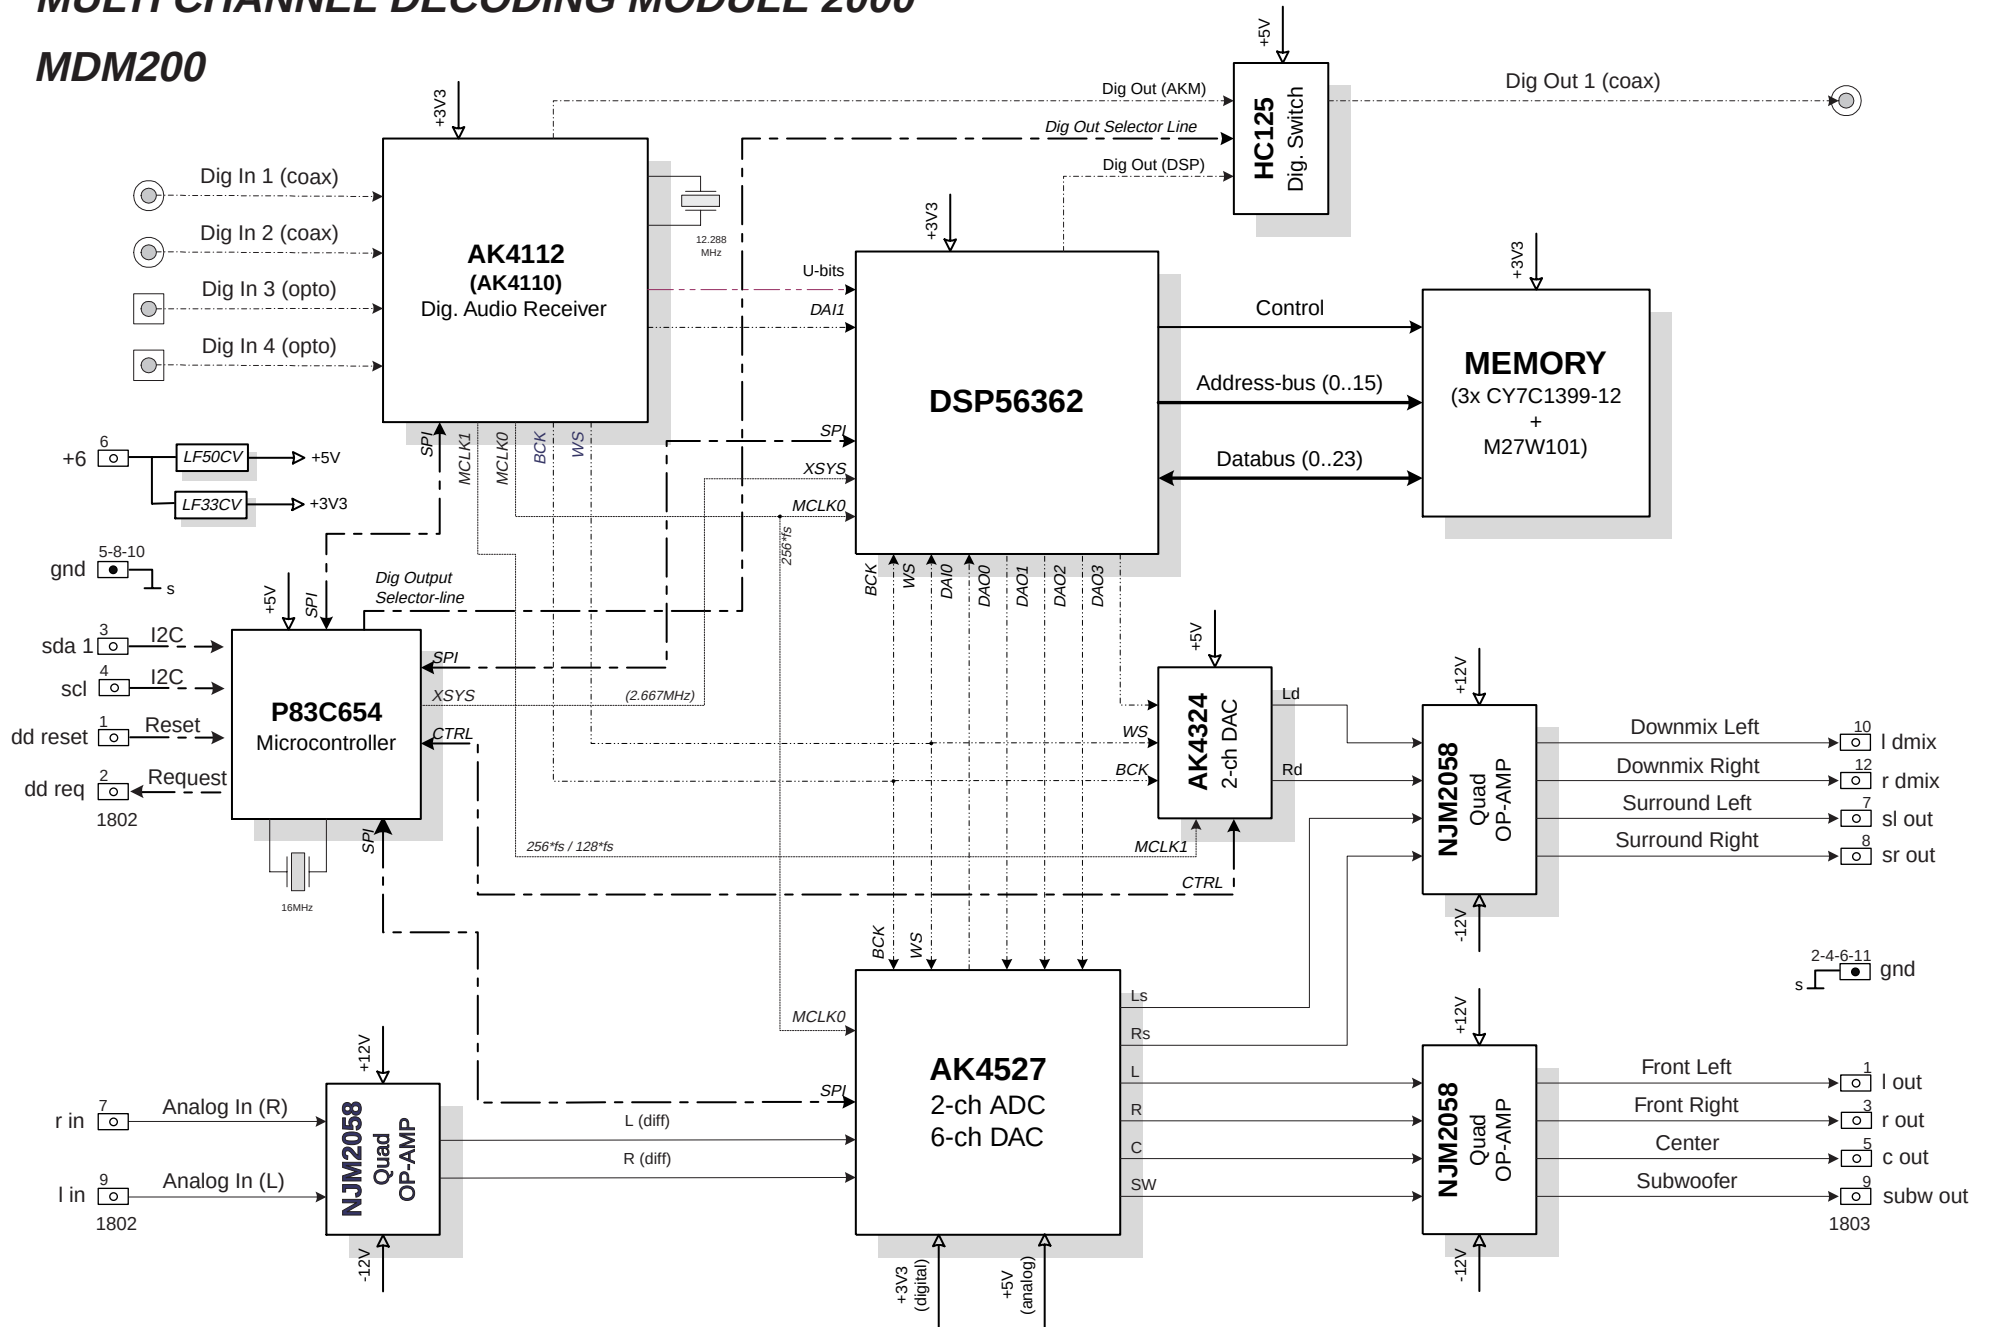


ELECTRICAL PARTSLIST - MDM MODULE

1003	3104 217 06390	MDM 2000 MODULE	2702	4822 123 14025	16V 2200U 20%
1701	4822 252 51172	FUSE 0,315A	6800	4822 218 11487	CONN. FIBER-GLASS GP1F32R
1702	4822 252 51172	FUSE 0,315A	6801	4822 218 11487	CONN. FIBER-GLASS GP1F32R
1704	2422 543 01118	CRYSTAL 16MHZ	7701	9322 146 09687	LF50CV
1705	2422 543 01132	CRYSTAL 12MH28	7702	4822 209 16978	LF33CV
1800	4822 267 31729	COAX OUT CONN.			
1801	4822 267 31448	COAX IN CONNECTOR			
1802	2422 025 10253	CON 12P. MALE			
1803	2422 025 10253	CON 12P. MALE			

Note: Only the parts mentioned in this list are normal service parts.

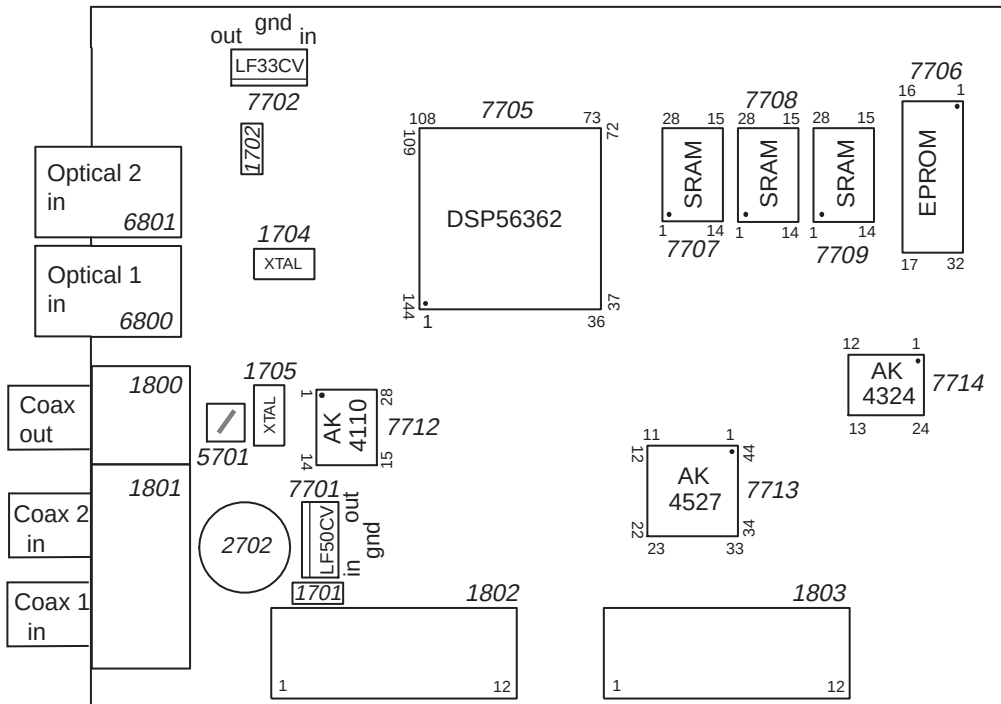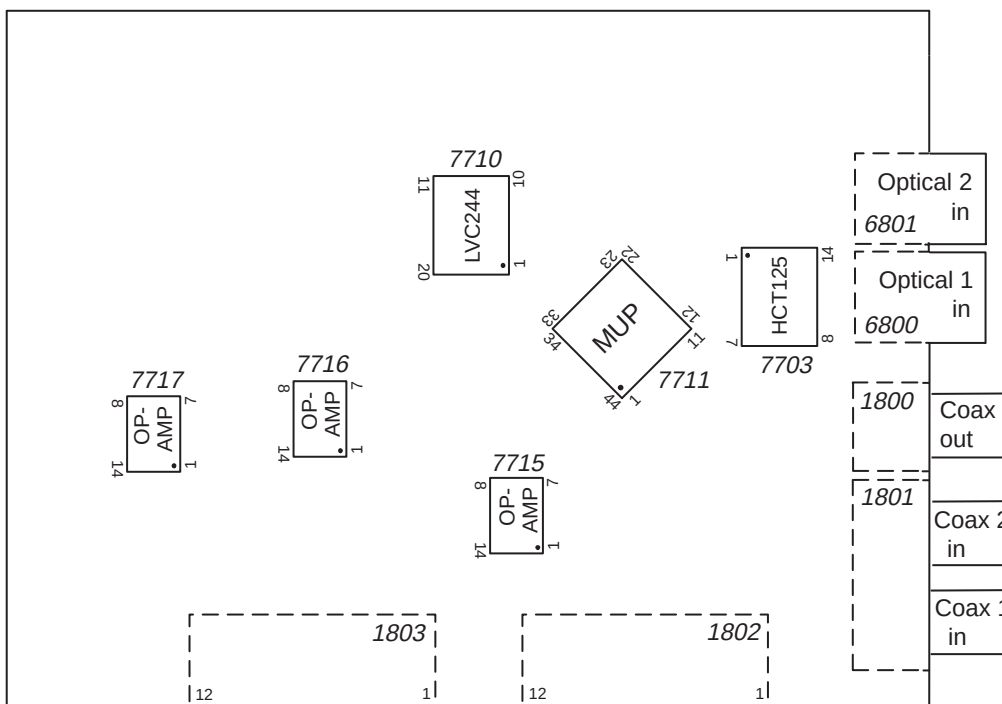Component side view**Copper side view**

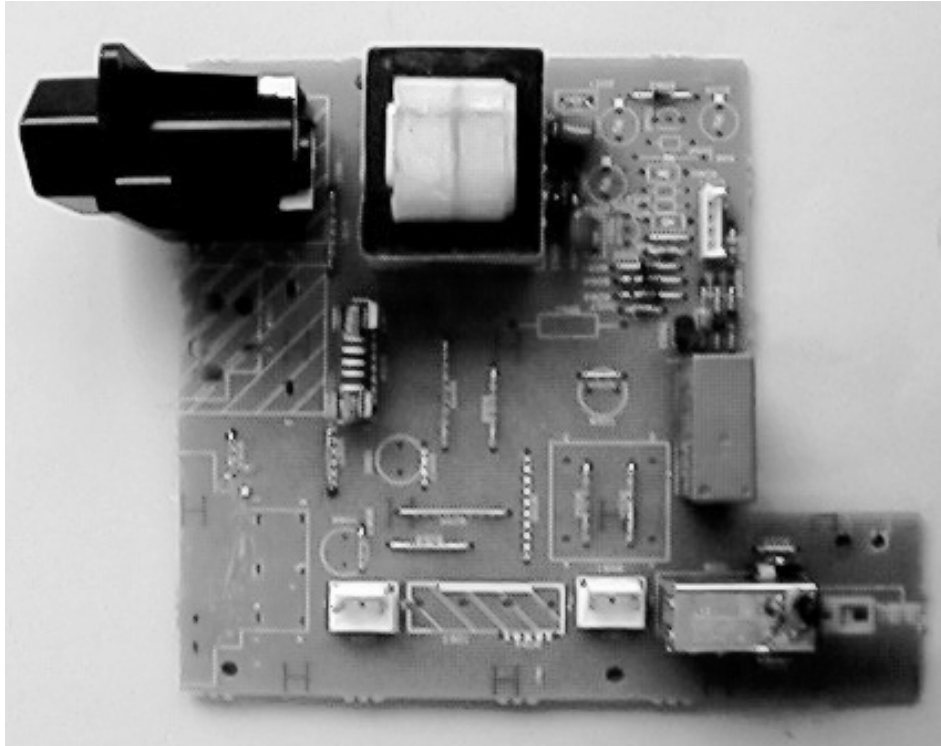


MAINS BOARD


TABLE OF CONTENTS


Circuit diagram	9-2
Component layout	9-3
Partslist	9-5

MAINS BOARD - CIRCUIT DIAGRAM

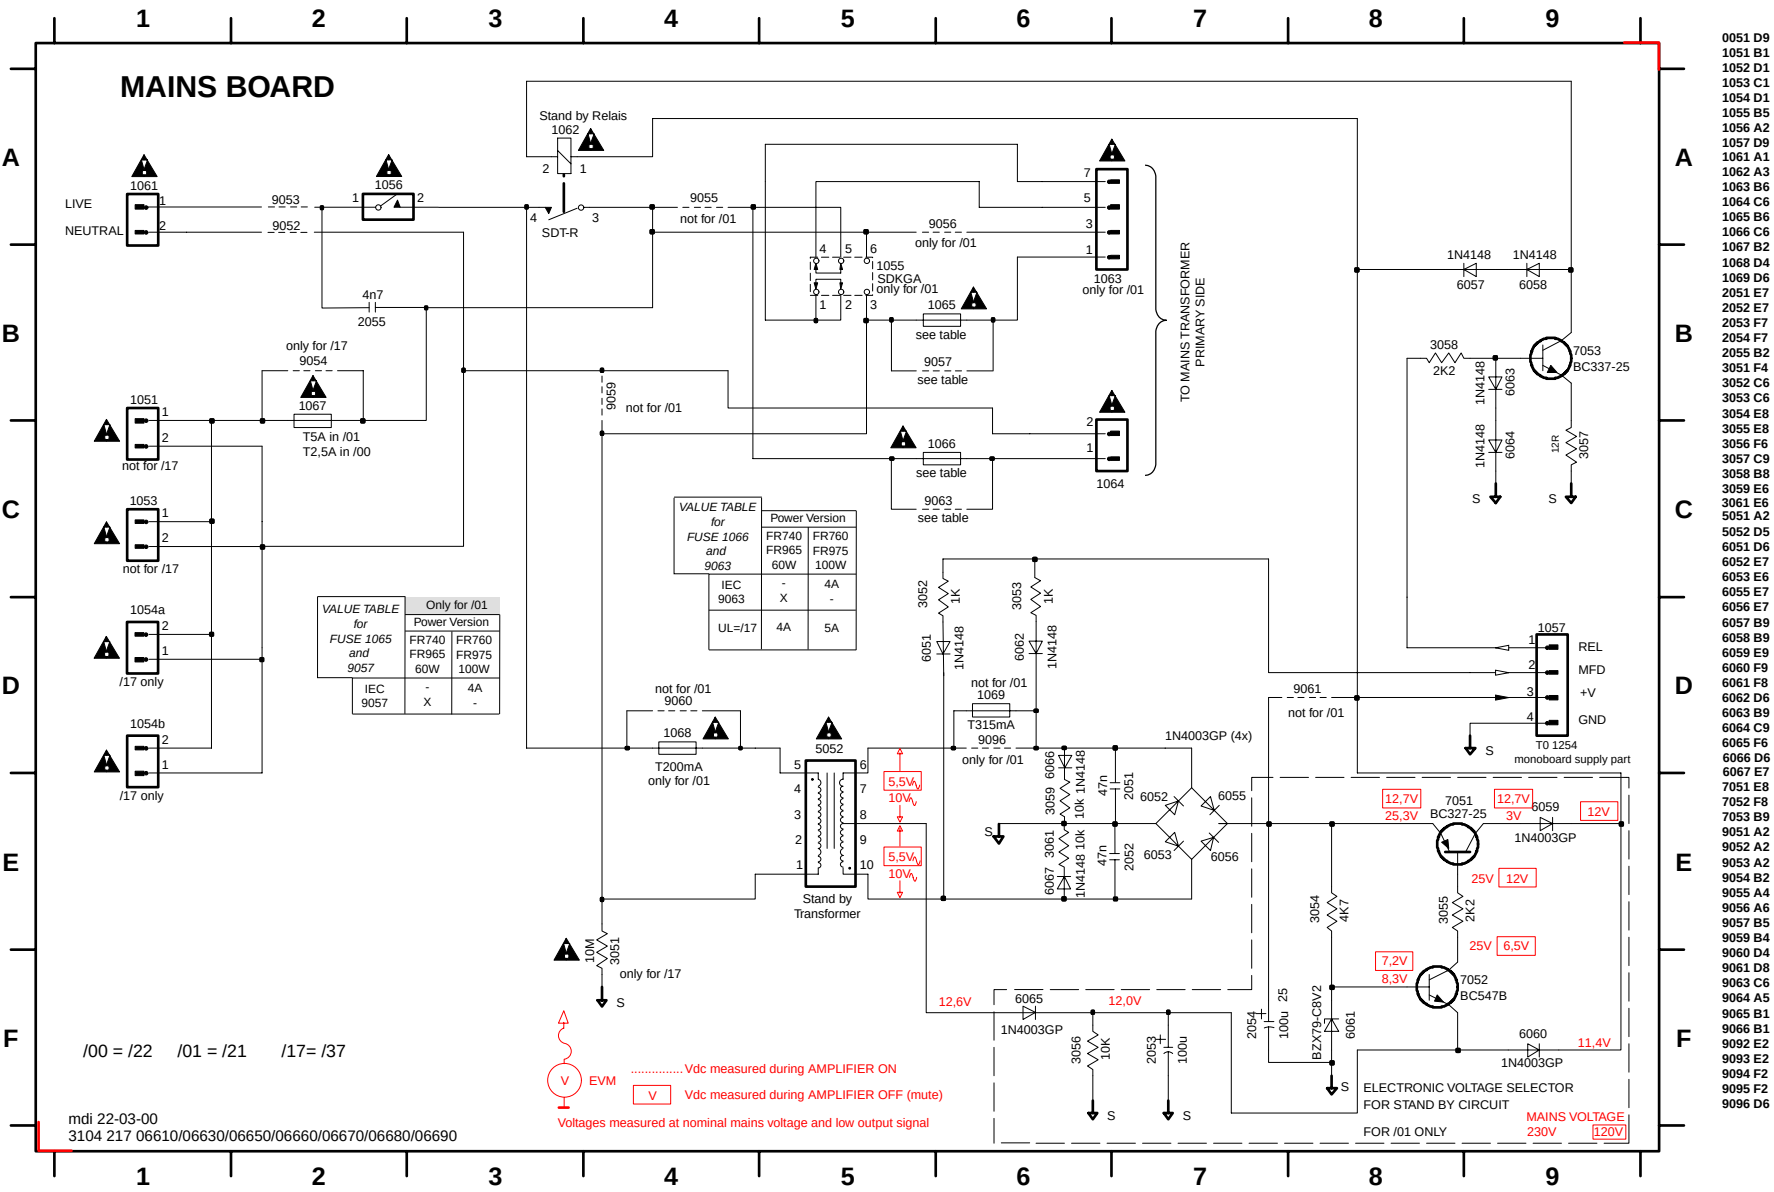

MAINS TRAF0 PART

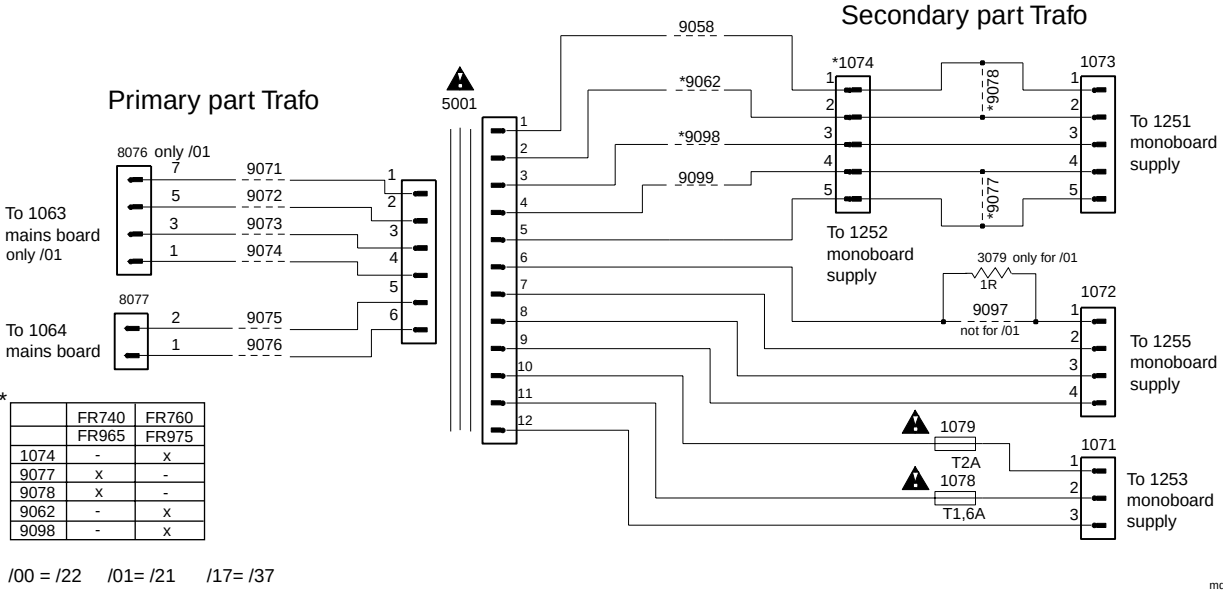


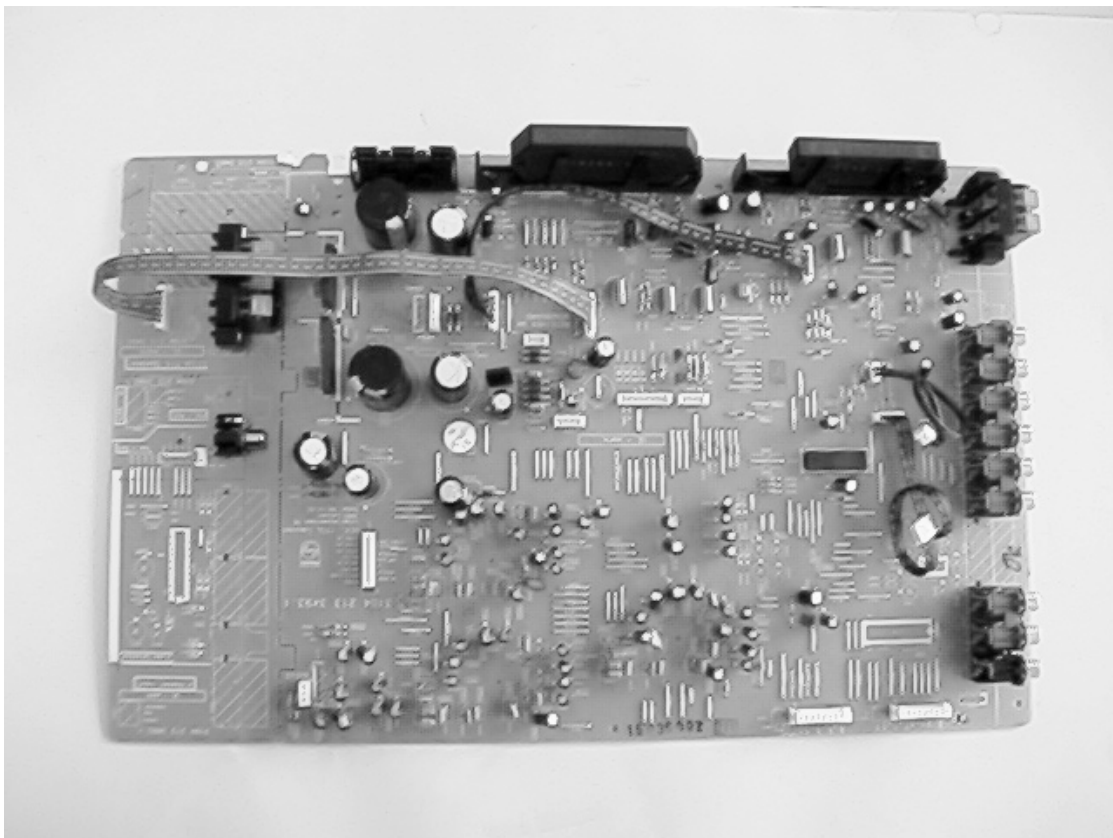


MONO2 BOARD



TABLE OF CONTENTS

Measurement hint	10-2
P50/Speaker/Video Selector layout	10-3
Circuit diagram Source selector	10-4
Circuit diagram Volume controle	10-5
Circuit diagram Supply	10-6
Circuit diagram Amplifier	10-7
Component layout	10-8
Mappings Components & Chips side.....	10-9
Component layout copper side view	10-10

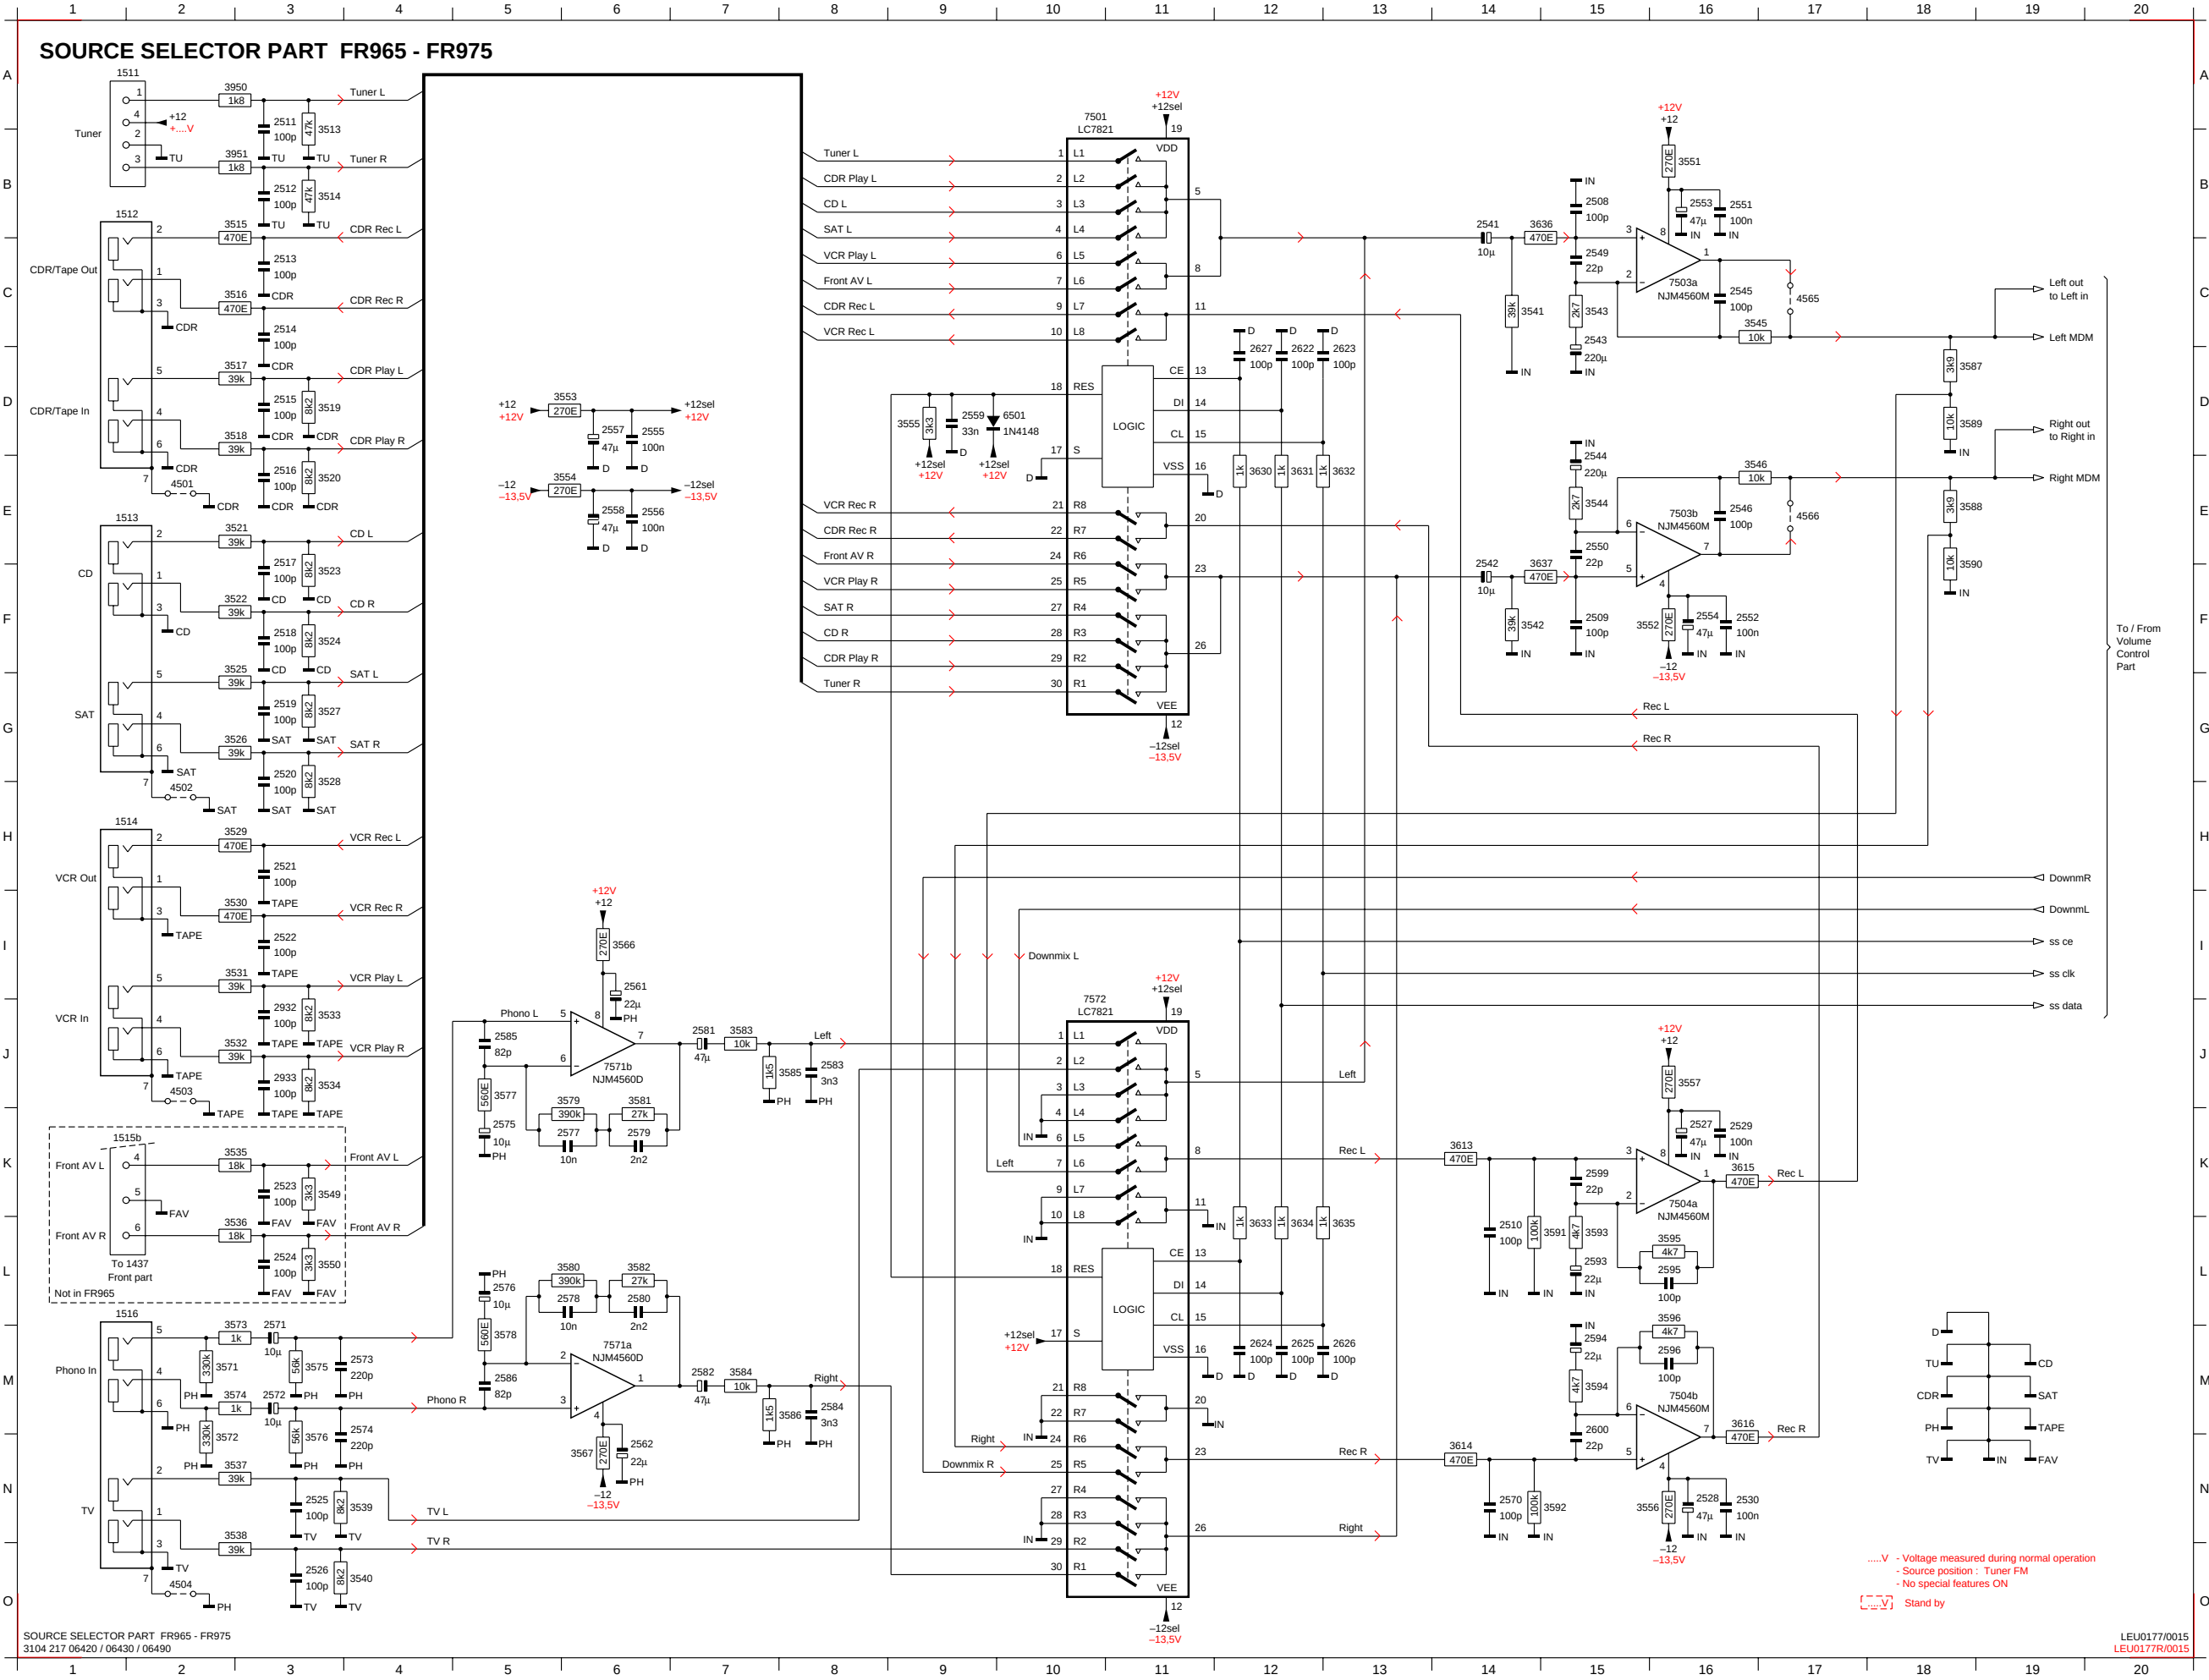

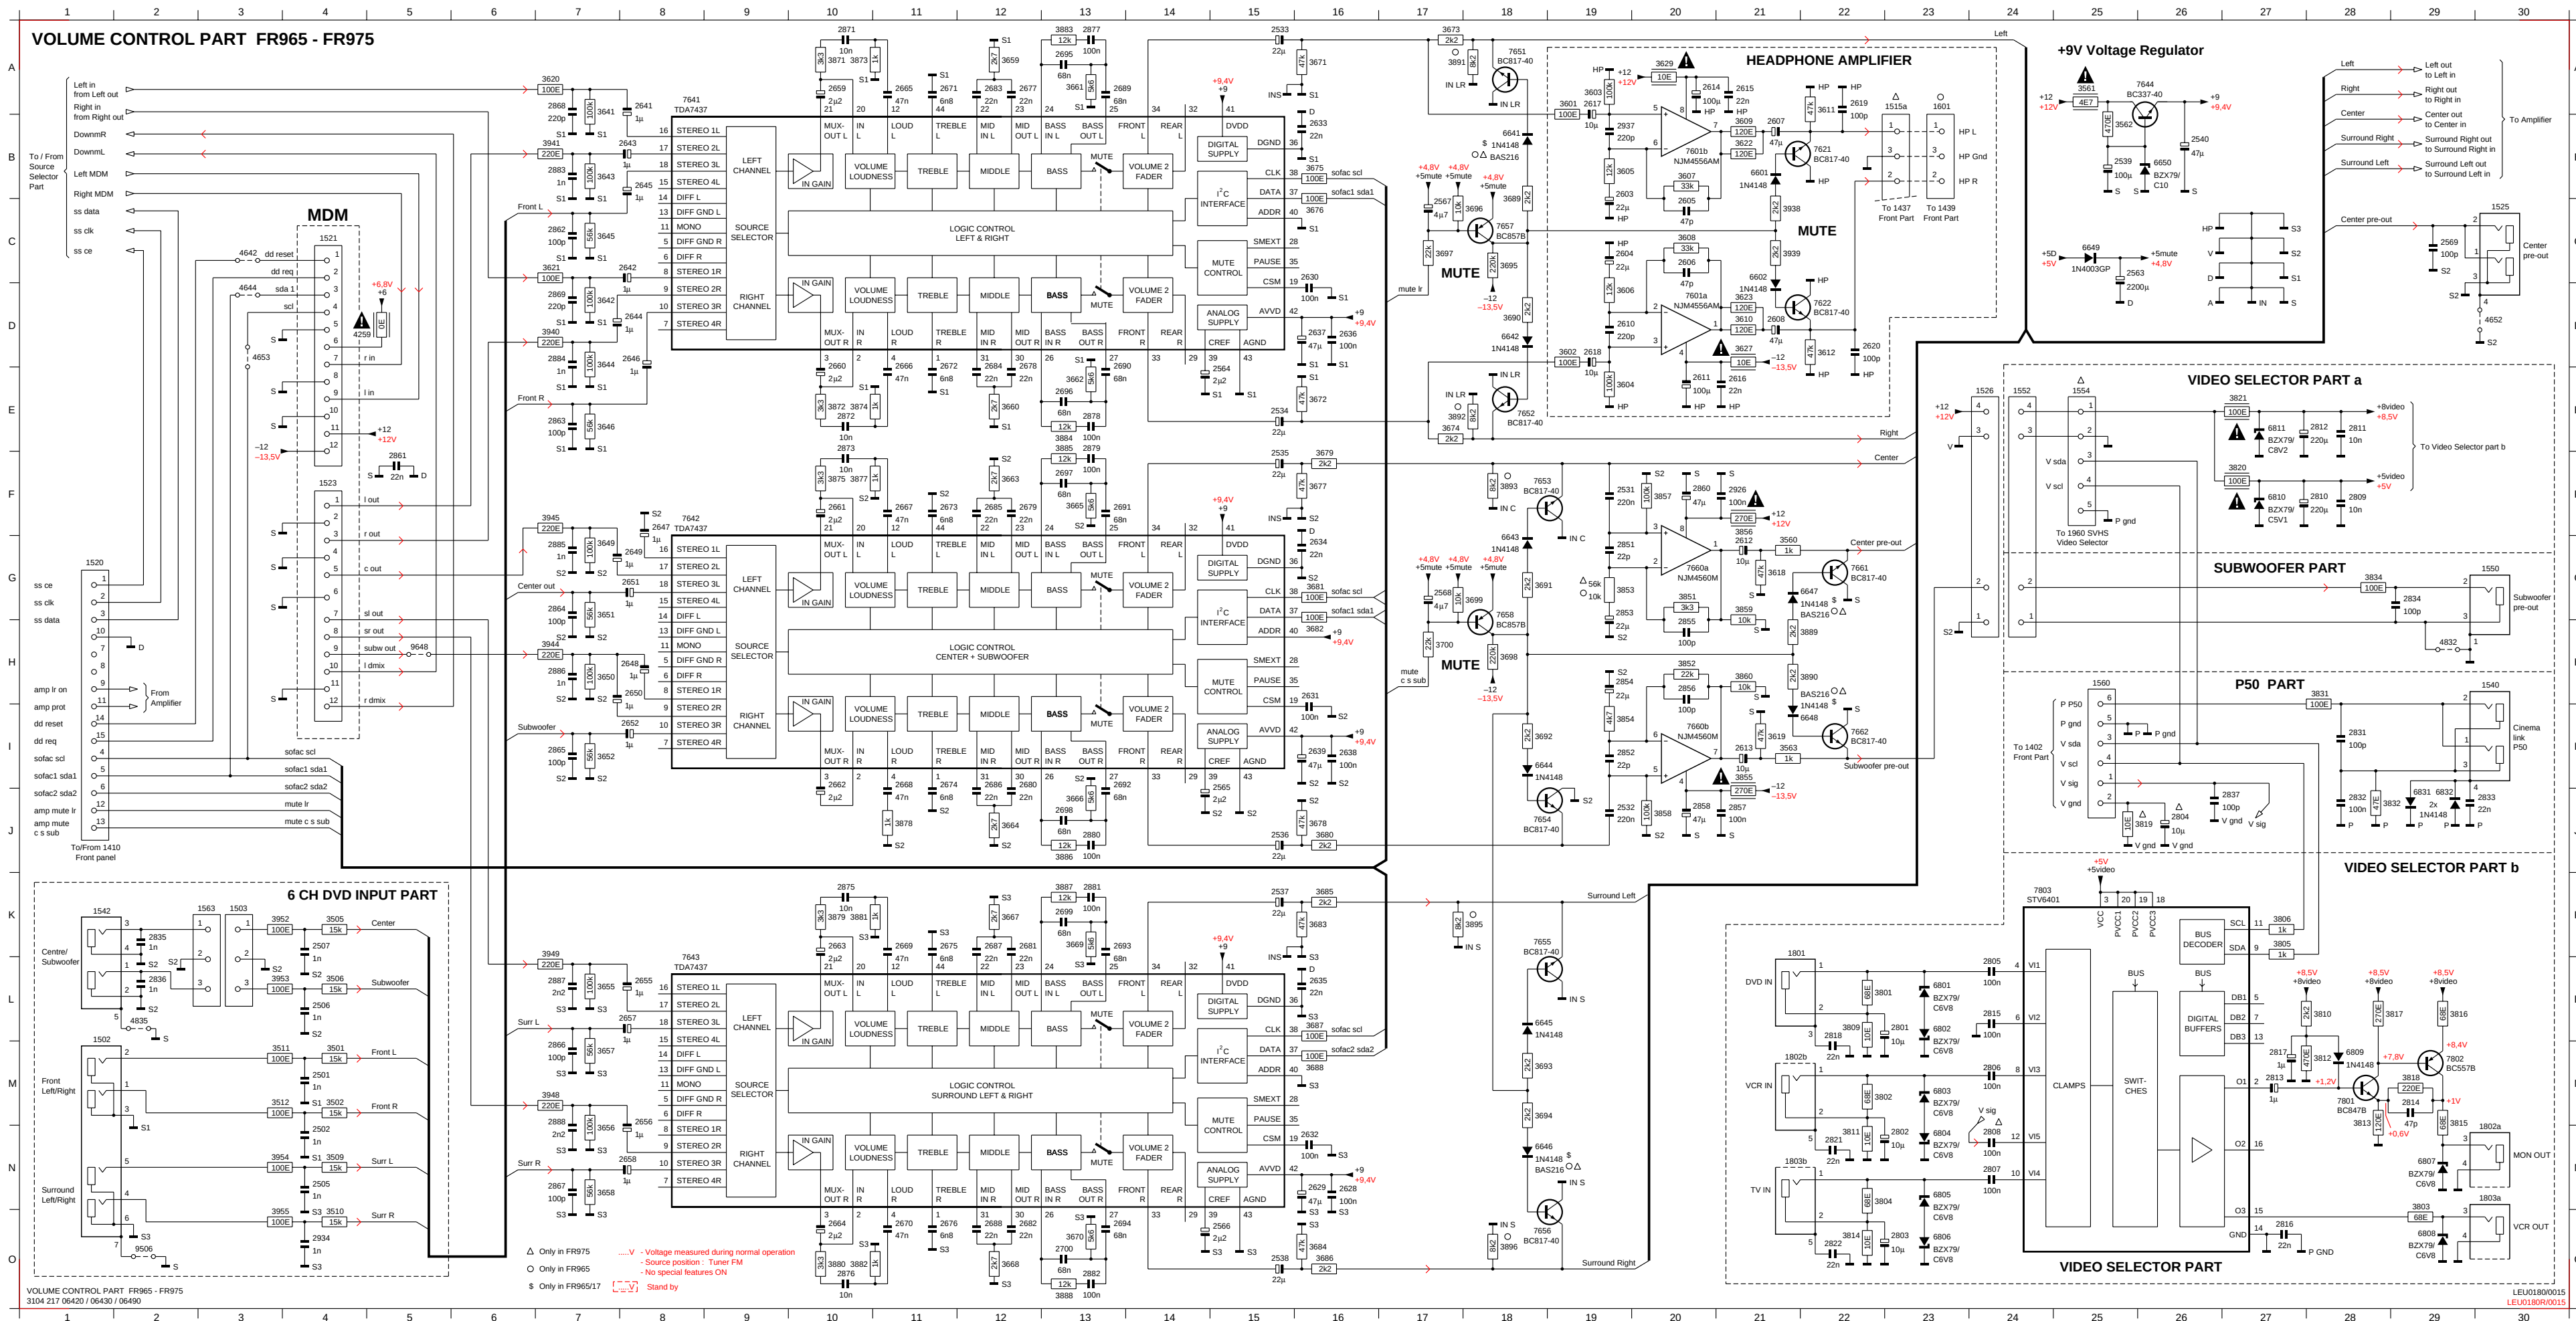

1502 M1 2694 O13 3664 J12 6650 B26
1503 K3 2695 A13 3665 F13 6801 L23
1515a A23 2696 E13 3666 J13 6802 L23
1520 G1 2697 F13 3667 K12 6803 M23
1521 C4 2698 J13 3668 O12 6804 N23
1523 F4 2699 K13 3669 K13 6805 N23
1525 C30 2700 O13 3670 O13 6806 O23
1526 E24 2801 L23 3671 A16 6807 N29
1540 H30 2802 N23 3672 E16 6808 O28
1542 K1 2803 O23 3673 A17 6809 M28
1550 G30 2804 J26 3674 E17 6810 F27
1552 E24 2805 L24 3675 B16 6811 E27
1554 E25 2806 M24 3676 C18 6812 J29
1560 H25 2807 N24 3677 F16 6813 J29
1563 K2 2808 N24 3678 J16 7601a B20
1601 A23 2809 F28 3679 F16 7601b D20
1801 K21 2810 F28 3680 J16 7621 B22
1802a N30 2811 E28 3681 C18 7622 D22
1802b M21 2812 E28 3682 H16 7641 A8
1803a N30 2813 M27 3683 K16 7642 F8
1803b N21 2814 M29 3684 O16 7643 L8
2501 M4 2815 L24 3685 A18 7644 A25
2502 N4 2816 O27 3686 O16 7651 A18
2505 N4 2817 M27 3687 L16 7652 E18
2506 L4 2818 L22 3688 M16 7653 F18
2507 K4 2819 F28 3689 C18 7654 J18
2531 F19 2822 O22 3690 D18 7655 K18
2532 J19 2831 I28 3691 G18 7656 O18
2533 A15 2832 J28 3692 I18 7657 C18
2534 E15 2833 J30 3693 M18 7658 G18
2535 F15 2834 G28 3694 M18 7659a G20
2536 J15 2835 K2 3695 C18 7660b I20
2537 K15 2836 L2 3696 C18 7661 G22
2538 O15 2837 J27 3697 C17 7662 I22
2539 D22 2879 E13 3698 H18 7801 M28
2540 B26 2882 I19 3699 G18 7802 M29
2563 C25 2883 G19 3700 H17 7803 K24
2564 E15 2884 H19 3801 L22 9506 O2
2565 J15 2885 P1 3802 C18 9648 H5
2566 O15 2886 H20 3803 N29
2567 C17 2887 J21 3804 N22
2568 G17 2888 J20 3805 K27
2569 C29 2889 F20 3806 K27
2603 B19 2891 F5 3809 L22
2604 C19 2892 C7 3810 L28
2605 C20 2893 E7 3811 N22
2606 C20 2894 A7 3812 L28
2607 B21 2895 I7 3813 N28
2608 D21 2896 M7 3814 O22
2610 D19 2897 N7 3815 J25
2611 E20 2898 A7 3816 J27
2612 G21 2899 D7 3817 L28
2613 I21 2871 A10 3818 M29
2614 A20 2872 E10 3819 J25
2615 A21 2873 I10 3820 F27
2616 E21 2875 K10 3821 E27
2617 A19 2876 O10 3831 H28
2618 D19 2877 A13 3832 J28
2619 A22 2878 E13 3834 G28
2620 D22 2879 E13 3851 K10
2629 N16 2881 K13 3853 G19
2630 C16 2882 O13 3854 I19
2631 H16 2883 P1 3855 J21
2632 N16 2884 D7 3856 F21
2633 B16 2885 G7 3857 F20
2634 G16 2886 H7 3858 J20
2635 L16 2887 A7 3859 G21
2636 D16 2888 M7 3860 H21
2637 D16 2892 F21 3871 A10
2638 I16 2934 O4 3872 E10
2639 I16 2937 B19 3873 A10
2641 A9 3501 M4 3874 E10
2642 C7 3502 M4 3875 F10
2643 B7 3505 K4 3877 F10
2644 D8 3506 L4 3878 J11
2645 B8 3509 N4 3879 K10
2646 D8 3510 O4 3880 O10
2647 F8 3511 M3 3881 K10
2648 H8 3512 M3 3882 O10
2649 G8 3540 G21 3883 A13
2648 H8 3561 A25 3884 E13
2651 G8 3562 B25 3885 E13
2652 I8 3563 I21 3886 J13
2655 L8 3601 A19 3887 K13
2656 M8 3602 D19 3888 O13
2658 N7 3604 E19 3890 H22
2659 A10 3605 B19 3891 A17
2660 E10 3606 D19 3892 E17
2661 F10 3607 B20 3893 F18
2662 I10 3608 C20 3895 K18
2663 K10 3609 B21 3896 O18
2664 O10 3610 D21 3898 C21
2665 A11 3611 A22 3899 C21
2666 E11 3612 D22 3940 D7
2667 F11 3618 G21 3941 B7
2668 H11 3619 I21 3944 H7
2669 K11 3620 A7 3945 F7
2670 O11 3621 C7 3948 M7
2671 A11 3622 B21 3949 K7
2672 E11 3623 D21 3952 K3
2673 F11 3627 D21 3953 L3
2674 I11 3629 A20 3954 N3
2675 K11 3641 B7 3955 O3
2676 O11 3642 D7 3956 O4
2677 A12 3643 B7 4642 C3
2678 E12 3644 E7 4644 D3
2679 F12 3645 C7 4652 D30
2680 I12 3646 E7 6602 C21
2681 K12 3649 G7 4632 D18
2682 O12 3650 H7 4635 L2
2683 A12 3651 G7 6601 B21
2684 E12 3652 I7 6602 C21
2685 F12 3655 L7 6641 E18
2686 I12 3656 N7 6642 D18
2687 K12 3657 M7 6643 G18
2688 O12 3658 N7 6644 H18
2689 A13 3659 A12 6645 I18
2690 E13 3660 E12 6646 N18
2691 F13 3661 A13 6647 G22
2692 I13 3662 E13 6648 I22
2693 K13 3663 F12 6649 C25

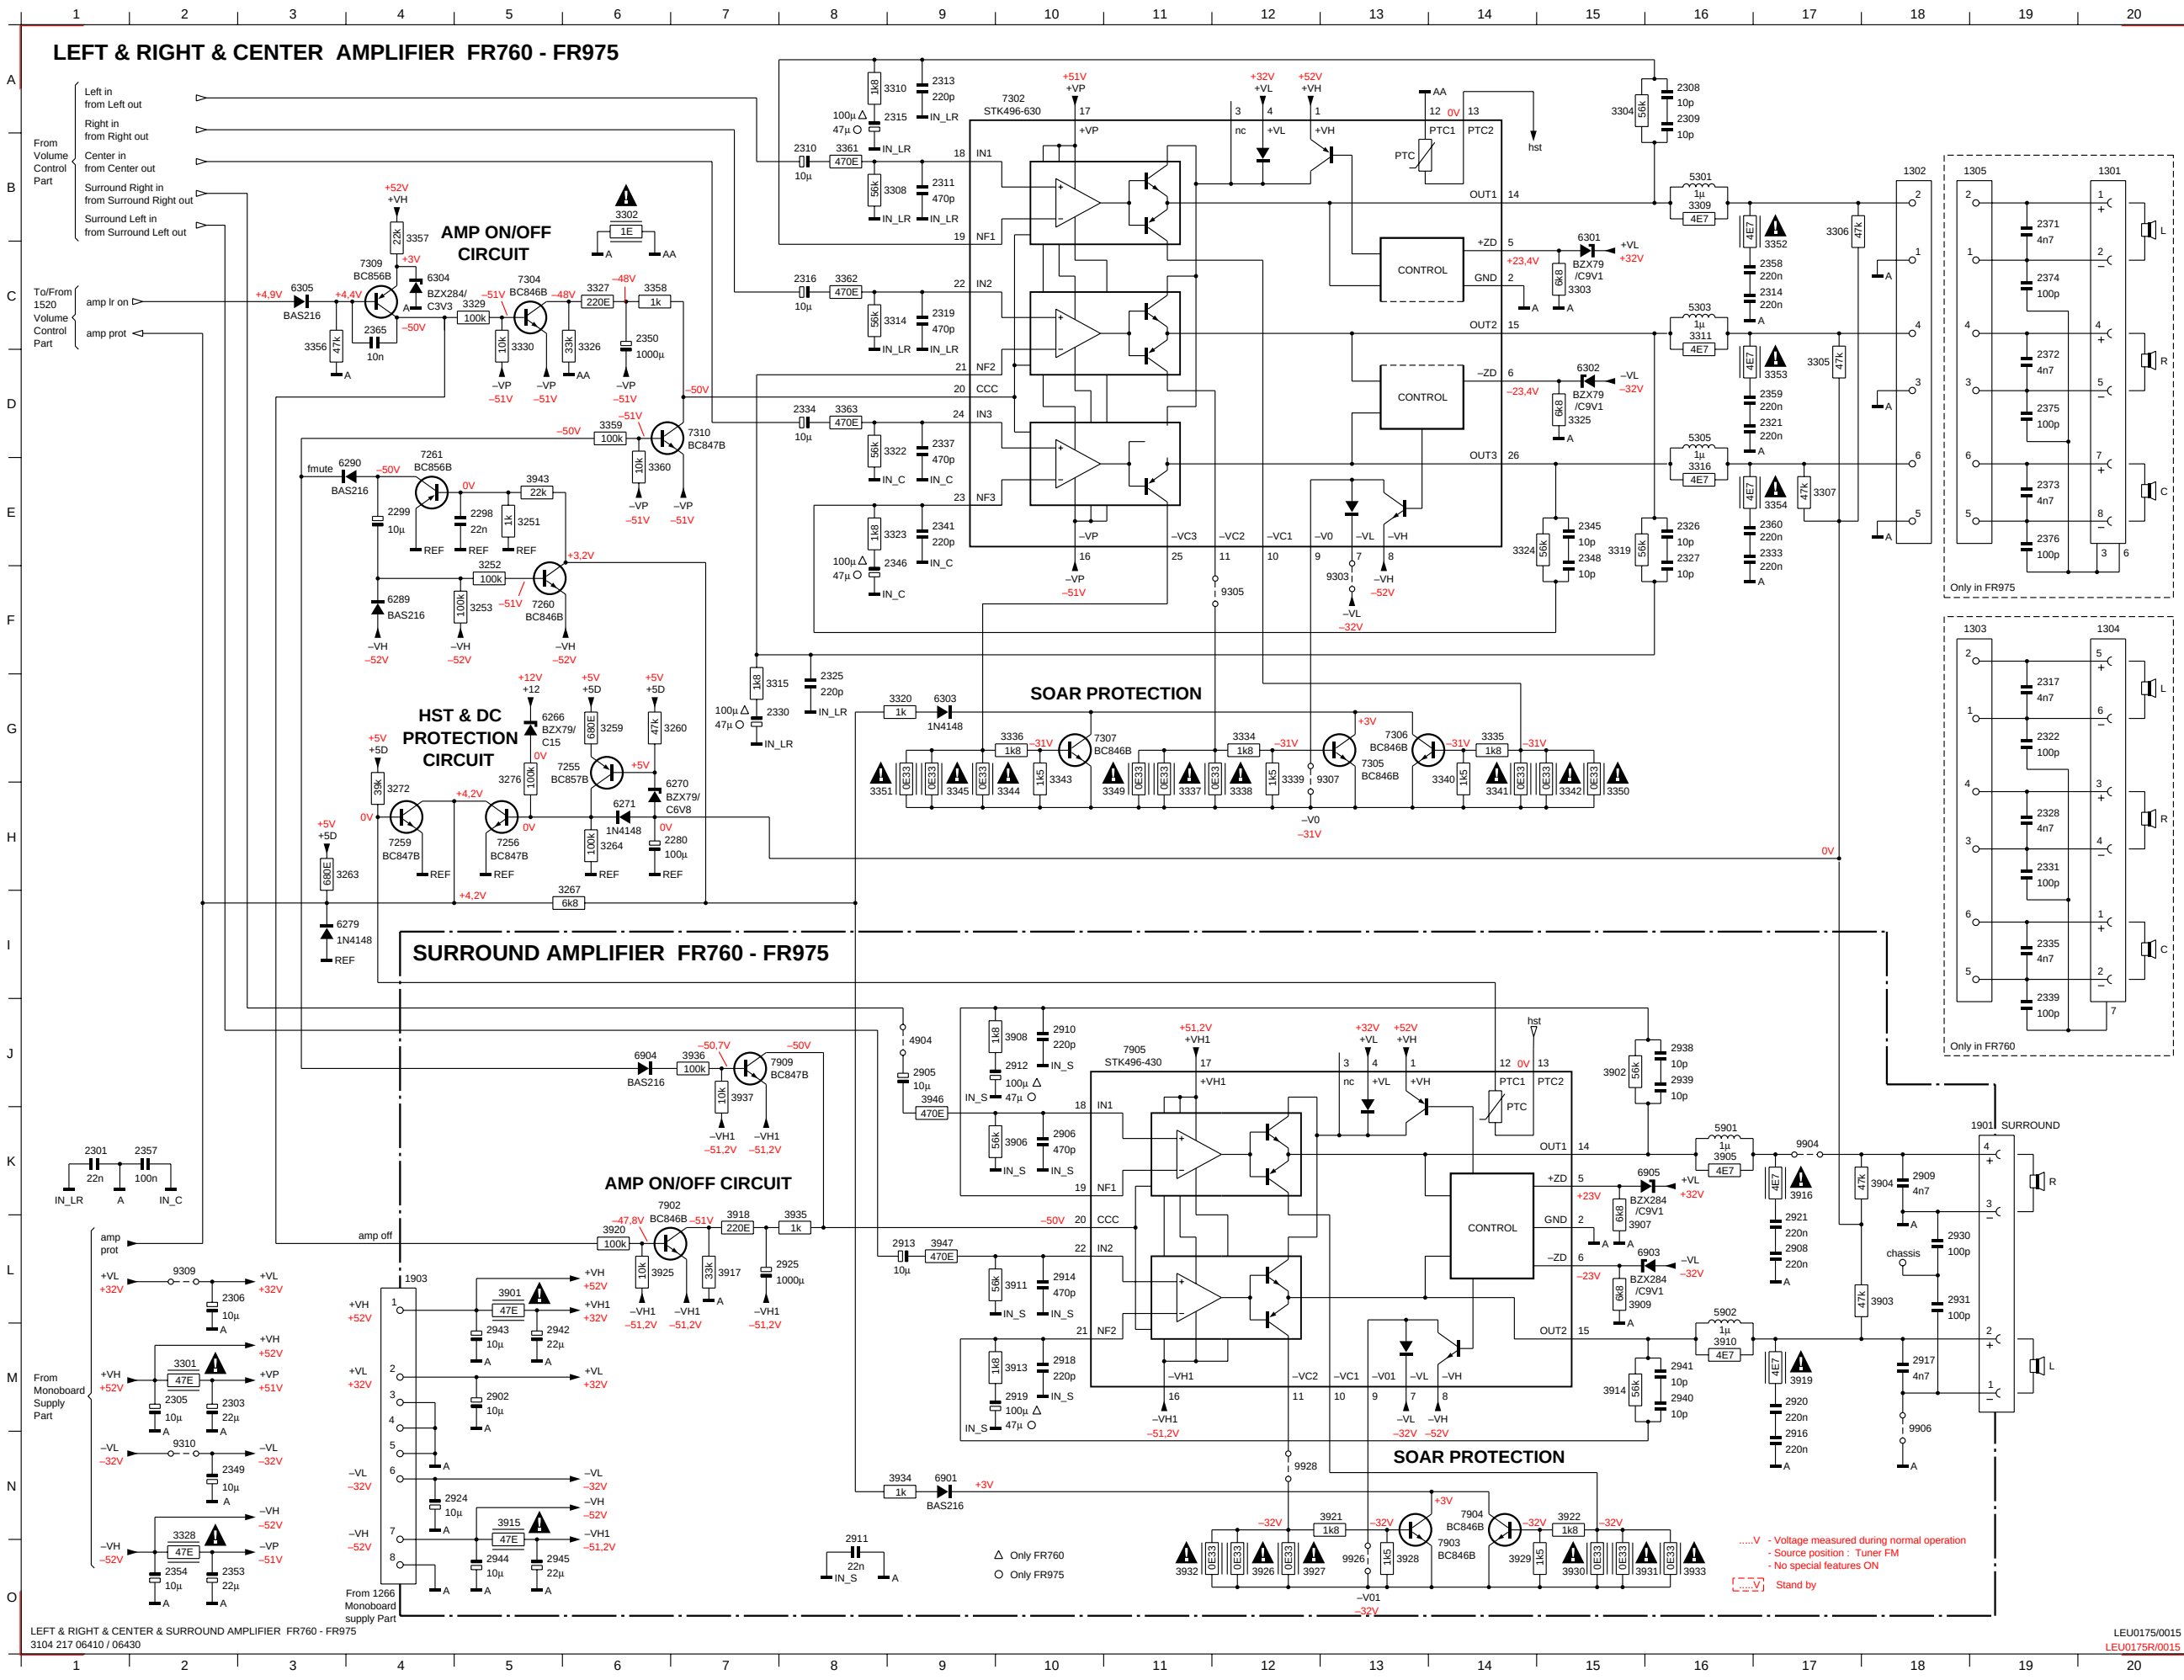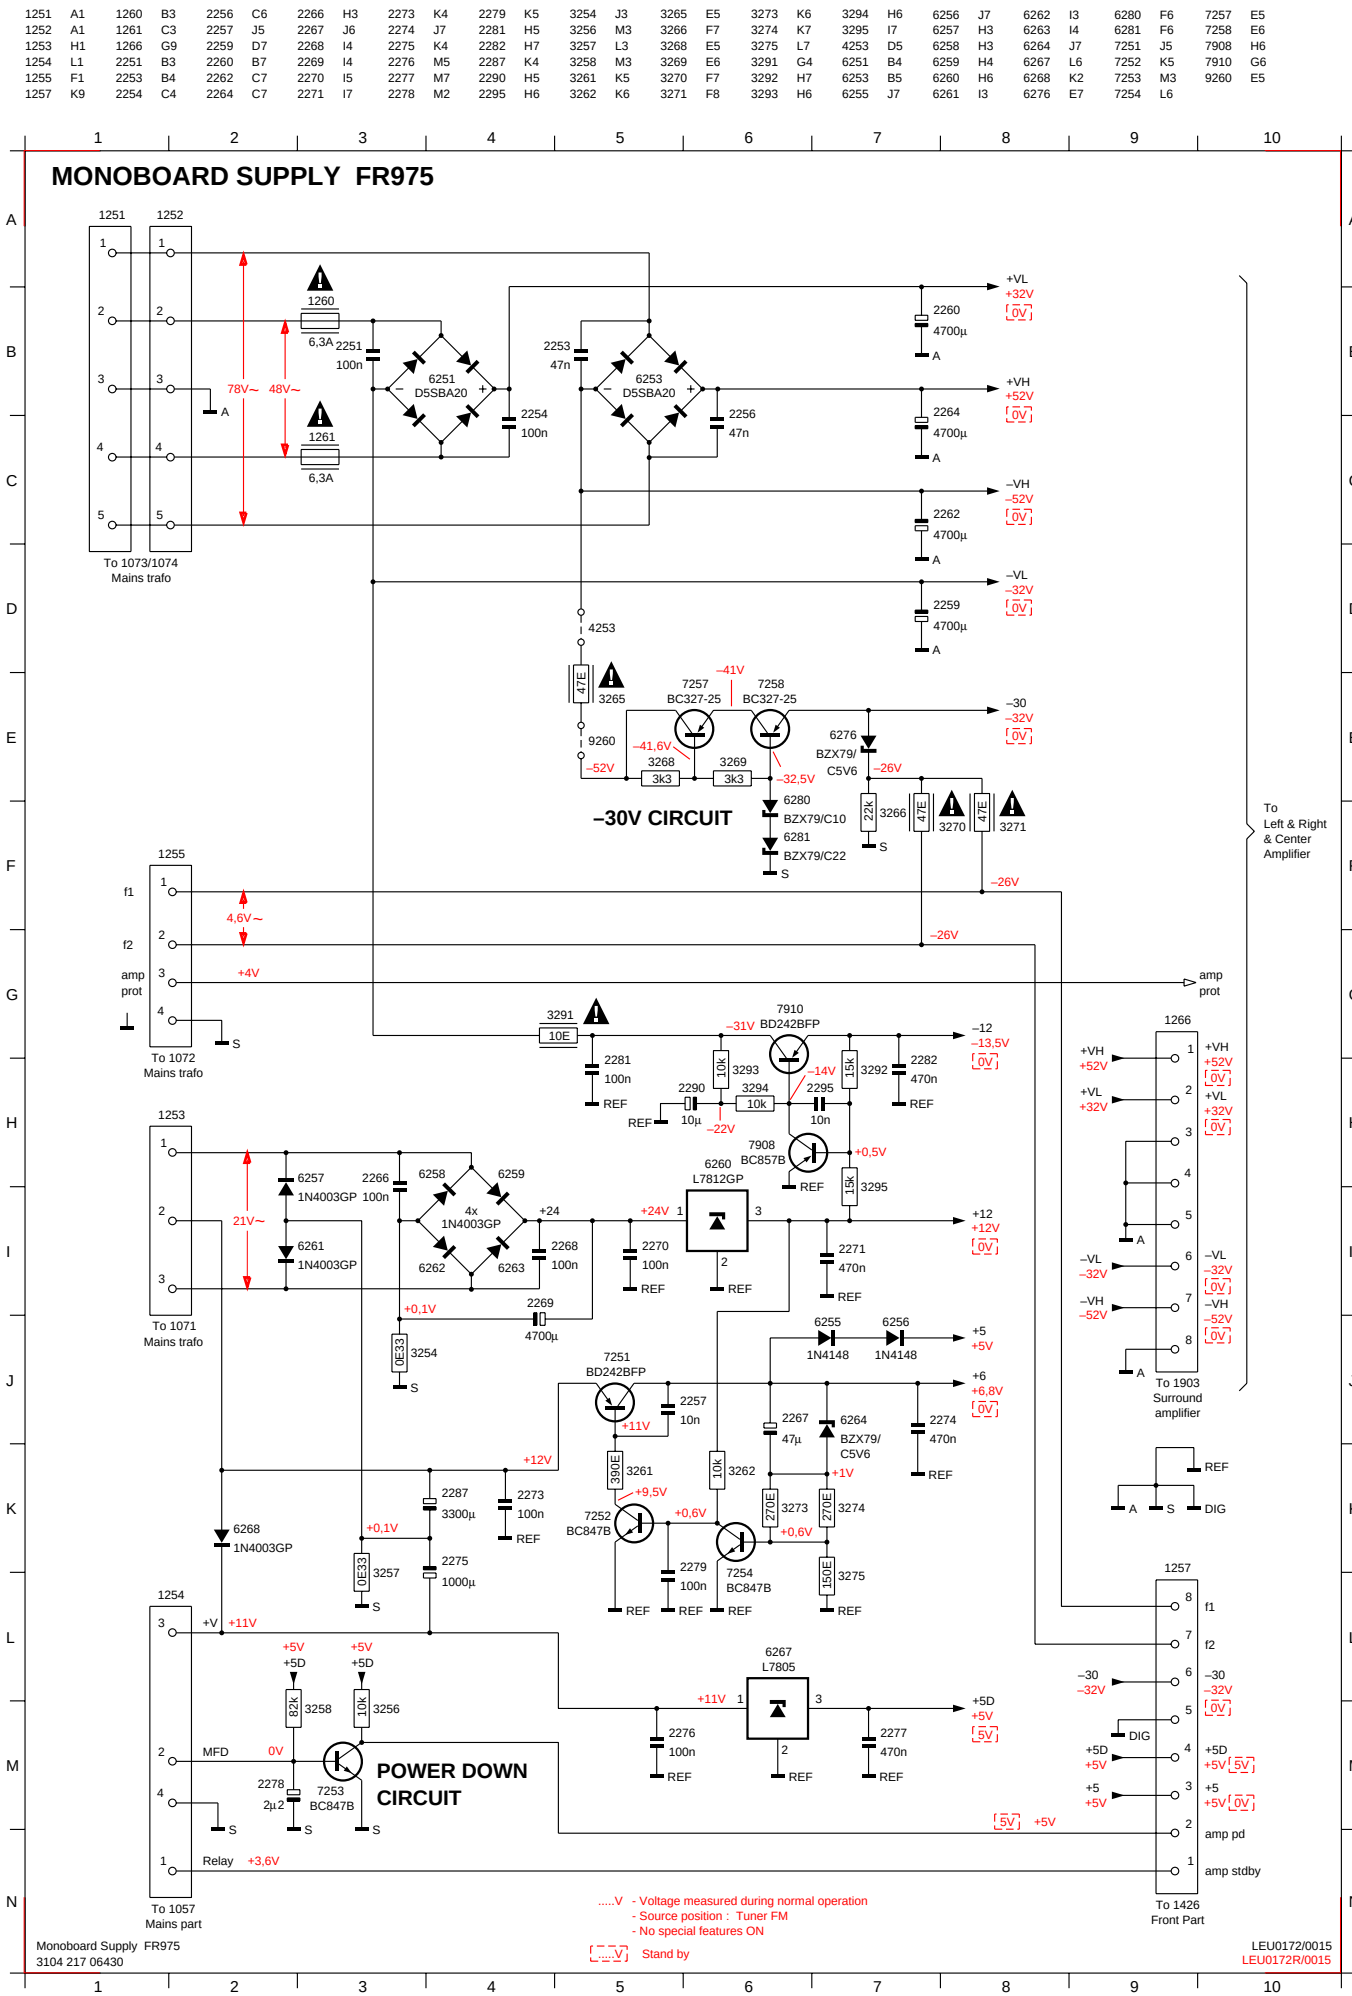



S-VHS VIDEO BOARD

TABLE OF CONTENTS

Circuit diagram	12-2
Component layout	12-3
Partslist	12-4

The schematic diagram illustrates the SVHS Video Selector circuit, which routes video signals from three sources (DVD, VCR, and TV) to either a monitor or a VCR. The circuit is divided into two main processing sections: CHROMINANCE and LUMINANCE, both utilizing STV6401 chips.

Inputs: DVD IN, VCR IN, and TV IN are each connected to a 196x series connector. Each input line passes through a 100E series resistor and a 10μF capacitor before entering the STV6401 chips. A 22nF capacitor is connected to ground at the input point.

CHROMINANCE Section: The 7965 STV6401 chip processes chrominance signals. It includes a BUS DECODER, DIGITAL BUFFERS, and SWITCHES. The chip is powered by +5V and +5video1. It has multiple input pins (VI1, VI2, VI3, VI4, VI5) and output pins (O1, O2, O3). The chip is connected to a 14-pin SVHS gnd.

LUMINANCE Section: The 7962 STV6401 chip processes luminance signals. It also includes a BUS DECODER, DIGITAL BUFFERS, and SWITCHES. It is powered by +5V and +5video2. It has multiple input pins (VI1, VI2, VI3, VI4, VI5) and output pins (O1, O2, O3). The chip is connected to a 14-pin SVHS gnd.

Output Stages: The outputs from the CHROMINANCE and LUMINANCE sections are connected to two output stages: MON OUT and VCR OUT. Each output stage consists of a 196x series connector, a 100E series resistor, and a 10μF capacitor. The output lines are connected to the output pins of the STV6401 chips.

Power and Grounding: The circuit is powered by +5V and +5video1/+5video2. It includes multiple ground connections, including a 14-pin SVHS gnd and a 14-pin SVHS gnd. The output stages are powered by +8.5V and +8video1/+8video2.

Components: The circuit includes various components such as resistors (100E, 10μF, 22nF), capacitors (100E, 10μF, 22nF), diodes (BZX79/C6V8), and integrated circuits (STV6401, BC557B, BC847B, 1N4148, 7963, 7964, 7965, 7962, 196x, 100E, 10μF, 22nF).

Legend: The legend indicates the following components: 196x (Connector), 100E (Resistor), 10μF (Capacitor), 22nF (Capacitor), BZX79/C6V8 (Diode), BC557B (Transistor), BC847B (Transistor), 1N4148 (Diode), 7963 (IC), 7964 (IC), 7965 (IC), 7962 (IC), 100E (Resistor), 10μF (Capacitor), 22nF (Capacitor), BZX79/C6V8 (Diode), BC557B (Transistor), BC847B (Transistor), 1N4148 (Diode).